

PRODUCT-DETAILS

2506 N/KI-914

2506 N/KI-914 Rocker with labelling field Switch/push button Single push button Symbol "bell" alpine white - Busch-balance SI



Informations générales

Extension du type de produit	2506 N/KI-914
Code de produit	2CKA001731A2015
EAN	4011395190456
Description courte	2506 N/KI-914 Rocker with labelling field Switch/push button Single push button Symbol "bell" alpine white - Busch-balance SI
Description longue	With >Bell< icon. With pilot lamp for uniform illumination of the labelling field. For flush-mounted push switch. Size of labelling field: 51 x 10 mm.

Installation

Instructions et manuels	No document needed
-------------------------	--------------------

Technique

Fiche produit, informations techniques	No document needed
Application	Switch/push button
Sub-Function	bell
Design Range	Busch-balance SI
Type de montage	Flush Mounted
Type of Fastening	Clamp
Finition de surface	Untreated Glossy
Matériau	Thermoplastic

Label Space Provided	Yes
Pictogramme	Symbol "bell"
Model Number	Single push button
RAL Number	RAL 9010 - Blanc pur
Couleur	alpine white

Environnement

Indice de protection	IP20
Statut RoHS	Following EU Directive 2011/65/EU and Amendment 2015/863 July 22, 2019
Informations RoHS	2CKA200000E1713
REACH Declaration	2CKA309999E9999

Dimensions

Produit Largeur Net	55 mm
Produit Hauteur Net	55 mm
Produit Longueur Net	20 mm
Poids net	20 g

Commande

Quantité minimum	1 pièce
Emballage Niveau 1 Unités	carton 10 pièce
Emballage Niveau 1 Poids	0.28 kg
Code douanier	85389099
Pays d'origine	Germany (DE)

Certificats et Déclarations (Numéro de document)

Déclaration de Conformité - CE	2CKA200000E1713
--------------------------------	-----------------

Classifications

ETIM 8	EC000011 - Control element/cover plate for domestic switching devices
ETIM 9	EC000011 - Control element/cover plate for domestic switching devices
Catégorie DEEE	Product Not in WEEE Scope
CN8	8538 90 99
eClass	V11.0 : 27144002

Accessories

Identifiant	Description	Type	Quantity	Unit Of Measure
2CKA001012A2131	2000/1 US-507 Flush Mounted Inserts Rocker/button 1 rocker Off switch 1-pole	2000/1 US-507	1	piece
2CKA001022A0656	2000/2 UK Switch insert Rocker/button 1 rocker 2-pole switch with Neon lamp	2000/2 UK	1	piece
2CKA001012A2193	2000/2 US-101-500 Flush Mounted Inserts Rocker/button 1 rocker 2-pole switch	2000/2 US-101-500	1	piece
2CKA001012A2196	2000/2 US-500 Flush Mounted Inserts Rocker/button 1 rocker 2-pole switch	2000/2 US-500	1	piece
2CKA001011A0816	2000/3 US Switch insert Rocker/button 1 rocker 3-pole switch	2000/3 US	1	piece
2CKA001012A2198	2000/6 US-500 Flush Mounted Inserts Rocker/button 1 rocker Two-way switch	2000/6 US-500	1	piece

2CKA001012A2110	2000/6 US-507 Flush Mounted Inserts Rocker/button 1 rocker Two-way switch	2000/6 US-507	1	piece
2CKA001012A2194	2000/6 USGL-500 Flush Mounted Inserts Rocker/button 1 rocker Two-way switch with Neon lamp	2000/6 USGL- 500	1	piece
2CKA001022A0659	2000/6 USK-500 Flush Mounted Inserts Rocker/button 1 rocker Two-way switch with Neon lamp	2000/6 USK- 500	1	piece
2CKA001012A0954	2000/6/2 US Switch insert Rocker/button 2 rocker Two-way switch	2000/6/2 US	1	piece
2CKA001012A2199	2000/7 US-500 Flush Mounted Inserts Rocker/button 1 rocker Intermediate switch	2000/7 US-500	1	piece
2CKA001012A2130	2000/7 US-507 Flush Mounted Inserts Rocker/button 1 rocker Intermediate switch	2000/7 US-507	1	piece
2CKA001413A0483	2020 US-201 Switch insert Push button 1 gang 1 rocker Single push button 1 NO 0 NC	2020 US-201	1	piece
2CKA001413A0491	2020 US-205 Switch insert Push button 2 gang 2 rocker Series push button 2 NO 0 NC	2020 US-205	1	piece
2CKA001413A1105	2020 US-205-500 Flush Mounted Inserts Rocker 2 gang 2 rocker Series push button	2020 US-205- 500	1	piece
2CKA001413A1104	2020 US-206-500 Flush Mounted Inserts Rocker Single push button	2020 US-206- 500	1	piece
2CKA001413A0574	2020 US-500 Flush Mounted Inserts Rocker Single push button	2020 US-500	1	piece
2CKA001413A1078	2020 US-507 Flush Mounted Inserts Rocker 1 rocker Single push button	2020 US-507	1	piece
2CKA001413A1109	2020 USGL-103 Flush Mounted Inserts Pull cord 1 rocker Single push button with Neon lamp	2020 USGL- 103	1	piece
2CKA001413A1106	2020 USGL-500 Flush Mounted Inserts Rocker Single push button with Neon lamp	2020 USGL- 500	1	piece
2CKA001725A1531	2511-91-507 Cover Frame 1gang(s) entrée-grey - Basic55	2511-91-507	1	piece
2CKA001725A1484	2511-92-507 Cover Frame 1gang(s) white - Basic55	2511-92-507	1	piece
2CKA001725A1501	2511-93-507 Cover Frame 1gang(s) champagne - Basic55	2511-93-507	1	piece
2CKA001725A1479	2511-94-507 Cover Frame 1gang(s) alpine white - Basic55	2511-94-507	1	piece
2CKA001725A1506	2511-95-507 Cover Frame 1gang(s) château- black - Basic55	2511-95-507	1	piece
2CKA001725A1511	2511-96-507 Cover Frame 1gang(s) chalet-white - Basic55	2511-96-507	1	piece
2CKA001725A1516	2511-97-507 Cover Frame 1gang(s) foyer-red - Basic55	2511-97-507	1	piece
2CKA001725A1521	2511-98-507 Cover Frame 1gang(s) bistro-blue - Basic55	2511-98-507	1	piece
2CKA001725A1526	2511-99-507 Cover Frame 1gang(s) maison- beige - Basic55	2511-99-507	1	piece
2CKA001725A1532	2512-91-507 Cover Frame 2gang(s) entrée-grey - Basic55	2512-91-507	1	piece
2CKA001725A1485	2512-92-507 Cover Frame 2gang(s) white - Basic55	2512-92-507	1	piece
2CKA001725A1502	2512-93-507 Cover Frame 2gang(s) champagne - Basic55	2512-93-507	1	piece
2CKA001725A1480	2512-94-507 Cover Frame 2gang(s) alpine white - Basic55	2512-94-507	1	piece
2CKA001725A1507	2512-95-507 Cover Frame 2gang(s) château- black - Basic55	2512-95-507	1	piece
2CKA001725A1512	2512-96-507 Cover Frame 2gang(s) chalet-white - Basic55	2512-96-507	1	piece
2CKA001725A1517	2512-97-507 Cover Frame 2gang(s) foyer-red - Basic55	2512-97-507	1	piece
2CKA001725A1522	2512-98-507 Cover Frame 2gang(s) bistro-blue - Basic55	2512-98-507	1	piece
2CKA001725A1527	2512-99-507 Cover Frame 2gang(s) maison- beige - Basic55	2512-99-507	1	piece
2CKA001725A1533	2513-91-507 Cover Frame 3gang(s) entrée-grey - Basic55	2513-91-507	1	piece
2CKA001725A1486	2513-92-507 Cover Frame 3gang(s) white - Basic55	2513-92-507	1	piece

2CKA001725A1503	2513-93-507 Cover Frame 3gang(s) champagne - Basic55	2513-93-507	1	piece
2CKA001725A1481	2513-94-507 Cover Frame 3gang(s) alpine white - Basic55	2513-94-507	1	piece
2CKA001725A1508	2513-95-507 Cover Frame 3gang(s) château- black - Basic55	2513-95-507	1	piece
2CKA001725A1513	2513-96-507 Cover Frame 3gang(s) chalet-white - Basic55	2513-96-507	1	piece
2CKA001725A1518	2513-97-507 Cover Frame 3gang(s) foyer-red - Basic55	2513-97-507	1	piece
2CKA001725A1523	2513-98-507 Cover Frame 3gang(s) bistro-blue - Basic55	2513-98-507	1	piece
2CKA001725A1528	2513-99-507 Cover Frame 3gang(s) maison- beige - Basic55	2513-99-507	1	piece
2CKA001725A1534	2514-91-507 Cover Frame 4gang(s) entrée-grey - Basic55	2514-91-507	1	piece
2CKA001725A1487	2514-92-507 Cover Frame 4gang(s) white - Basic55	2514-92-507	1	piece
2CKA001725A1504	2514-93-507 Cover Frame 4gang(s) champagne - Basic55	2514-93-507	1	piece
2CKA001725A1482	2514-94-507 Cover Frame 4gang(s) alpine white - Basic55	2514-94-507	1	piece
2CKA001725A1509	2514-95-507 Cover Frame 4gang(s) château- black - Basic55	2514-95-507	1	piece
2CKA001725A1514	2514-96-507 Cover Frame 4gang(s) chalet-white - Basic55	2514-96-507	1	piece
2CKA001725A1519	2514-97-507 Cover Frame 4gang(s) foyer-red - Basic55	2514-97-507	1	piece
2CKA001725A1524	2514-98-507 Cover Frame 4gang(s) bistro-blue - Basic55	2514-98-507	1	piece
2CKA001725A1529	2514-99-507 Cover Frame 4gang(s) maison- beige - Basic55	2514-99-507	1	piece
2CKA001725A1535	2515-91-507 Cover Frame 5gang(s) entrée-grey - Basic55	2515-91-507	1	piece
2CKA001725A1488	2515-92-507 Cover Frame 5gang(s) white - Basic55	2515-92-507	1	piece
2CKA001725A1505	2515-93-507 Cover Frame 5gang(s) champagne - Basic55	2515-93-507	1	piece
2CKA001725A1483	2515-94-507 Cover Frame 5gang(s) alpine white - Basic55	2515-94-507	1	piece
2CKA001725A1510	2515-95-507 Cover Frame 5gang(s) château- black - Basic55	2515-95-507	1	piece
2CKA001725A1515	2515-96-507 Cover Frame 5gang(s) chalet-white - Basic55	2515-96-507	1	piece
2CKA001725A1520	2515-97-507 Cover Frame 5gang(s) foyer-red - Basic55	2515-97-507	1	piece
2CKA001725A1525	2515-98-507 Cover Frame 5gang(s) bistro-blue - Basic55	2515-98-507	1	piece
2CKA001725A1530	2515-99-507 Cover Frame 5gang(s) maison- beige - Basic55	2515-99-507	1	piece
2CKA001726A0222	2516-901-507 Decorative Styling Frame attica / pigeon blue - Basic55	2516-901-507	1	piece
2CKA001726A0223	2516-902-507 Decorative Styling Frame silver metallic - Basic55	2516-902-507	1	piece
2CKA001726A0224	2516-903-507 Decorative Styling Frame light green - Basic55	2516-903-507	1	piece
2CKA001726A0225	2516-904-507 Decorative Styling Frame orange - Basic55	2516-904-507	1	piece
2CKA001726A0226	2516-905-507 Decorative Styling Frame yellow - Basic55	2516-905-507	1	piece
2CKA001726A0227	2516-906-507 Decorative Styling Frame apricot - Basic55	2516-906-507	1	piece
2CKA001726A0228	2516-907-507 Decorative Styling Frame luminous - Basic55	2516-907-507	1	piece
2CKA001726A0220	2516-92-507 Decorative Styling Frame white - Basic55	2516-92-507	1	piece
2CKA001726A0230	2516-93-507 Decorative Styling Frame champagne - Basic55	2516-93-507	1	piece
2CKA001726A0218	2516-94-507 Decorative Styling Frame alpine white - Basic55	2516-94-507	1	piece

2CKA001726A0232	2516-95-507 Decorative Styling Frame château-black - Basic55	2516-95-507	1	piece
2CKA001726A0234	2516-96-507 Decorative Styling Frame chalet-white - Basic55	2516-96-507	1	piece
2CKA001740A0071	3050 Accessories 1 gang blue	3050	1	piece
2CKA001740A0082	3060 Concrete box 1 gang blue	3060	1	piece
2CKA002148A0120	2148 Extension of Claws	2148	1	piece
2CKA001740A0061	3048/10 Mounting box set 1 gang with Plastering moulding tool, positioning device, RFID-chip blue - Busch-axcent	3048/10	1	piece
2CKA001740A0072	3058/10 Mounting box set 1 gang blue - Busch-axcent	3058/10	1	piece
2CKA001740A0083	3068/10 Mounting box set blue - Busch-axcent	3068/10	1	piece

Catégories

Produits basse tension → Wiring Accessories - Light Switch Ranges → Cover Plates (partly incl. Insert) → Mechanical Controls

