


PRODUCT-DETAILS

2000/1 US-500

2000/1 US-500 Flush Mounted Inserts Rocker/button 1 rocker Off switch 1-pole

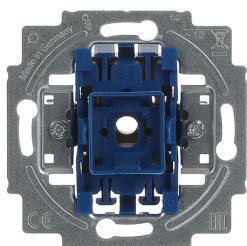

Informations générales

Extension du type de produit	2000/1 US-500
Code de produit	2CKA001012A2059
EAN	4011395941003
Description courte	2000/1 US-500 Flush Mounted Inserts Rocker/button 1 rocker Off switch 1-pole
Description longue	2000/1 US-500 Switch Insert

Installation

Instructions et manuels	No document needed
-------------------------	--------------------

Technique

Fiche produit, informations techniques	No document needed
Tension nominale (U_r)	250 V
Auxiliary Voltage AC/DC	250 V AC/DC
Courant nominal (I_n)	10 A
Maximum Switching Current	Fluorescent Lamps 10 A
Number of Rocker Switches	1
Type de commutation	Off switch 1-pole

Actuator Type	Rocker/button
Type de raccordement	Plug Clamp
Type de montage	Flush Mounted
Finition de surface	Untreated Matt
Matériau	Thermoplastic
Label Space Provided	No
Voyant	Non-illuminated
RAL Number	RAL 5010 - Bleu gentiane
Application Function	Electrical Load and Light Control

Environnement

Statut RoHS	Following EU Directive 2011/65/EU and Amendment 2015/863 July 22, 2019
Informations RoHS	2CKA200000E0122
REACH Declaration	2CKA309999E9999

Dimensions

Produit Largeur Net	71 mm
Produit Hauteur Net	32 mm
Produit Longueur Net	71 mm
Poids net	61 g
Profondeur d'encastrement (t ₂)	32 mm

Commande

Quantité minimum	1 pièce
Emballage Niveau 1 Unités	carton 10 pièce
Emballage Niveau 1 Poids	0.614 kg
Code douanier	85365080
Pays d'origine	Germany (DE)

Certificats et Déclarations (Numéro de document)

Déclaration de Conformité - CE	2CKA100000E0025
--------------------------------	-----------------

Classifications

ETIM 8	EC001590 - Installation switch
ETIM 9	EC001590 - Installation switch
Catégorie DEEE	5. Small Equipment (No External Dimension More Than 50 cm)
DEEE B2C / B2B	Business To Consumer
CN8	8536 50 80
eClass	V11.0 : 27144053

Accessories

Identifiant	Description	Type	Quantity	Unit Of Measure
-------------	-------------	------	----------	-----------------

2CKA001751A3090	1786-20-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint platinum - alpha	1786-20-500	1	piece
2CKA001751A3086	1786-21-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint bronze - alpha	1786-21-500	1	piece
2CKA001751A3081	1786-22G-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint ivory - alpha	1786-22G-500	1	piece
2CKA001751A3078	1786-24G-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint studio white	1786-24G-500	1	piece
2CKA001751A3080	1786-260-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint palladium - alpha	1786-260-500	1	piece
2CKA001751A3085	1786-266-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint titanium - alpha	1786-266-500	1	piece
2CKA001751A3093	1786-803-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint grey metallic - 63x63	1786-803-500	1	piece
2CKA001751A3079	1786-81-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint anthracite - 63x63	1786-81-500	1	piece
2CKA001751A3083	1786-82-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint ivory white - 63x63	1786-82-500	1	piece
2CKA001751A3075	1786-83-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint aluminium silver - 63x63	1786-83-500	1	piece
2CKA001751A3116	1786-840-500 Cover Plates Switch/push button Single rocker Without imprint antique brass - 63x63	1786-840-500	1	piece
2CKA001751A3074	1786-84-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint studio white - 63x63	1786-84-500	1	piece
2CKA001751A3077	1786-866-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint stainless steel - Pure Stainless Steel	1786-866-500	1	piece
2CKA001751A3089	1786-884-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint studio white matt - 63x63	1786-884-500	1	piece
2CKA001751A3094	1786-885-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint black matt - 63x63	1786-885-500	1	piece
2CKA001434A0448	2546-212 Rocker with legend Switch/push button Single rocker Neutral symbol white - Busch-Duro 2000	2546-212	1	piece
2CKA001434A0554	2546-214 Rocker with legend Switch/push button Single rocker Neutral symbol alpine white - Reflex SI	2546-214	1	piece
2CKA001731A2001	2506-212-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint white - Busch-Duro 2000	2506-212-500	1	piece
2CKA001731A0322	2506-212-506 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint white - Busch-Duro 2000	2506-212-506	1	piece
2CKA001731A1889	2506-212-507 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint white - Busch-Duro 2000	2506-212-507	1	piece
2CKA001731A1992	2506-214-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint alpine white - Reflex SI/SI Linear	2506-214-500	1	piece
2CKA001731A1891	2506-214-507 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint alpine white - Reflex SI/SI Linear	2506-214-507	1	piece

2CKA001731A1007	2506-215 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint black - Reflex SI	2506-215	1	piece
2CKA001731A4012	2506-217-101 Rocker Switch/push button Single rocker red - Reflex SI	2506-217-101	1	piece
2CKA001731A4007	1764 NLI-13-82 Rocker with labelling field Switch/push button Single push button green - 63x63	1764 NLI-13-82	1	piece
2CKA001731A1858	1764 NLI-22G Rocker with labelling field Switch/push button Single rocker ivory - alpha	1764 NLI-22G	1	piece
2CKA001731A1569	1764 NLI-24G Rocker with labelling field Switch/push button Single rocker studio white - alpha	1764 NLI-24G	1	piece
2CKA001731A1975	1764 NLI-803 Rocker with labelling field Switch/push button Single rocker grey metallic - 63x63	1764 NLI-803	1	piece
2CKA001731A1552	1764 NLI-81 Rocker with labelling field Switch/push button Single push button anthracite - 63x63	1764 NLI-81	1	piece
2CKA001731A1876	1764 NLI-82 Rocker with labelling field Switch/push button Single push button ivory white - 63x63	1764 NLI-82	1	piece
2CKA001731A1948	1764 NLI-83 Rocker with labelling field Switch/push button Single push button aluminium silver - 63x63	1764 NLI-83	1	piece
2CKA001731A1877	1764 NLI-84 Rocker with labelling field Switch/push button Single push button studio white - 63x63	1764 NLI-84	1	piece
2CKA001731A2024	1764 NLI-840-500 Rocker Switch/push button Single rocker Without imprint antique brass - 63x63	1764 NLI-840- 500	1	piece
2CKA001731A1953	1764 NLI-866 Rocker with labelling field Switch/push button Single push button stainless steel - Pure Stainless Steel	1764 NLI-866	1	piece
2CKA001731A1985	1764 NLI-884 Rocker with labelling field Switch/push button Single push button studio white matt - 63x63	1764 NLI-884	1	piece
2CKA001731A1982	1764 NLI-885 Rocker with labelling field Switch/push button Single push button black matt - 63x63	1764 NLI-885	1	piece
2CKA001731A0355	2509-212-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint white - Busch-Duro 2000	2509-212-500	1	piece
2CKA001731A0900	2509-214 Rocker Switch/push button Single rocker alpine white - Reflex SI	2509-214	1	piece
2CKA001731A1995	2509-214-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint alpine white - Reflex SI/SI Linear	2509-214-500	1	piece
2CKA001751A1625	1789-20 Rocker Switch/push button Single rocker platinum - alpha	1789-20	1	piece
2CKA001751A1716	1789-21 Rocker Switch/push button Single rocker bronze - alpha	1789-21	1	piece
2CKA001751A2490	1789-22G Rocker Switch/push button Single rocker ivory - alpha	1789-22G	1	piece
2CKA001751A2102	1789-24G Rocker Switch/push button Single rocker studio white - alpha	1789-24G	1	piece
2CKA001751A2825	1789-260 Rocker Switch/push button Single rocker palladium - alpha	1789-260	1	piece
2CKA001751A2836	1789-266 Rocker Switch/push button Single rocker titanium - alpha	1789-266	1	piece
2CKA001751A3013	1789-803 Rocker Switch/push button Single rocker grey metallic - 63x63	1789-803	1	piece
2CKA001751A2928	1789-81 Rocker Switch/push button Single rocker anthracite - 63x63	1789-81	1	piece

2CKA001751A2813	1789-82 Rocker Switch/push button Single rocker ivory white - 63x63	1789-82	1	piece
2CKA001751A2945	1789-83 Rocker Switch/push button Single rocker aluminium silver - 63x63	1789-83	1	piece
2CKA001751A3118	1789-840-500 Cover Plates Switch/push button Single rocker Without imprint antique brass - 63x63	1789-840-500	1	piece
2CKA001751A3091	1789-84-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint studio white - 63x63	1789-84-500	1	piece
2CKA001751A2957	1789-866 Rocker Switch/push button Single rocker stainless steel - Pure Stainless Steel	1789-866	1	piece
2CKA001751A3033	1789-884 Rocker Switch/push button Single rocker studio white matt - 63x63	1789-884	1	piece
2CKA001751A3047	1789-885 Rocker Switch/push button Single rocker black matt - 63x63	1789-885	1	piece
2CKA001731A0272	2520 LI-212 Rocker Switch/push button Single rocker white - Busch-Duro 2000	2520 LI-212	1	piece
2CKA001731A1996	2520 LI-214-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Symbol "light" alpine white - Reflex SI/SI Linear	2520 LI-214-500	1	piece
2CKA001751A3185	2520 LI-803 Rocker Switch/push button Single rocker grey metallic - 63x63	2520 LI-803	1	piece
2CKA001751A3186	2520 LI-81 Rocker Switch/push button Single rocker anthracite - 63x63	2520 LI-81	1	piece
2CKA001751A3187	2520 LI-82 Rocker Switch/push button Single rocker ivory white - 63x63	2520 LI-82	1	piece
2CKA001751A3188	2520 LI-83 Rocker Switch/push button Single rocker aluminium silver - 63x63	2520 LI-83	1	piece
2CKA001751A3191	2520 LI-866 Rocker Switch/push button Single rocker stainless steel - Pure Stainless Steel	2520 LI-866	1	piece
2CKA001751A3192	2520 LI-884 Rocker Switch/push button Single rocker studio white matt - 63x63	2520 LI-884	1	piece
2CKA001751A3193	2520 LI-885 Rocker Switch/push button Single rocker black matt - 63x63	2520 LI-885	1	piece
2CKA001731A2000	2520-212-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint white - Busch-Duro 2000	2520-212-500	1	piece
2CKA001731A0413	2520-212-506 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint white - Busch-Duro 2000	2520-212-506	1	piece
2CKA001731A1994	2520-214-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint alpine white - Reflex SI/SI Linear	2520-214-500	1	piece
2CKA001731A0561	2506 N-212 Rocker with labelling field Switch/push button Single rocker white - Busch-Duro 2000	2506 N-212	1	piece
2CKA001731A0520	2506 N-214 Rocker with labelling field Switch/push button Single rocker alpine white - Reflex SI	2506 N-214	1	piece
2CKA001731A1445	2510 NLI-212 Rocker with labelling field Switch/push button Single rocker white - Busch-Duro 2000	2510 NLI-212	1	piece
2CKA001731A1452	2510 NLI-214 Rocker with labelling field Switch/push button Single rocker alpine white - Reflex SI	2510 NLI-214	1	piece
2CKA001731A0330	2502-212-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Characters 0 and 1 white	2502-212-500	1	piece
2CKA001731A0884	2502-214 Rocker Switch/push button Single rocker alpine white - Reflex SI	2502-214	1	piece
2CKA001434A0455	2544-212 Rocker with legend Switch/push button Single rocker Neutral symbol white - Busch-Duro 2000	2544-212	1	piece

2CKA001434A0570	2544-214 Rocker with legend Switch/push button Single rocker Characters 0 and 1; neutral symbol alpine white - Reflex SI	2544-214	1	piece
2CKA001751A3146	1789 N-803 Rocker Switch/push button Single rocker grey metallic - 63x63	1789 N-803	1	piece
2CKA001751A3147	1789 N-81 Rocker Switch/push button Single rocker anthracite - 63x63	1789 N-81	1	piece
2CKA001751A3148	1789 N-82 Rocker Switch/push button Single rocker ivory white - 63x63	1789 N-82	1	piece
2CKA001751A3149	1789 N-83 Rocker Switch/push button Single rocker aluminium silver - 63x63	1789 N-83	1	piece
2CKA001751A3151	1789 N-84-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint studio white - 63x63	1789 N-84-500	1	piece
2CKA001751A3152	1789 N-866 Rocker Switch/push button Single rocker stainless steel - Pure Stainless Steel	1789 N-866	1	piece
2CKA001751A3153	1789 N-884 Rocker Switch/push button Single rocker studio white matt - 63x63	1789 N-884	1	piece
2CKA001751A3154	1789 N-885 Rocker Switch/push button Single rocker black matt - 63x63	1789 N-885	1	piece
2CKA001751A1633	1789 LI-20 Rocker with legend Switch/push button Single rocker Symbol "light" platinum - alpha	1789 LI-20	1	piece
2CKA001751A1724	1789 LI-21 Rocker with legend Switch/push button Single rocker Symbol "light" bronze - alpha	1789 LI-21	1	piece
2CKA001751A2516	1789 LI-22G Rocker with legend Switch/push button Single rocker Symbol "light" ivory - alpha	1789 LI-22G	1	piece
2CKA001751A2201	1789 LI-24G Rocker with legend Switch/push button Single rocker Symbol "light" studio white - alpha	1789 LI-24G	1	piece
2CKA001751A2828	1789 LI-260 Rocker with legend Switch/push button Single rocker Symbol "light" palladium - alpha	1789 LI-260	1	piece
2CKA001751A2839	1789 LI-266 Rocker with legend Switch/push button Single rocker Symbol "light" titanium - alpha	1789 LI-266	1	piece
2CKA001753A0072	1789 LI-72 Cover Plate Switch/push button Single rocker ivory - impuls	1789 LI-72	1	piece
2CKA001753A4815	1789 LI-74 Cover plate with legend Switch/push button Single rocker Symbol "light" alpine white - impuls	1789 LI-74	1	piece
2CKA001753A0187	1789 LI-774 Cover plate with legend Switch/push button Single rocker Symbol "light" studio white matt - impuls	1789 LI-774	1	piece
2CKA001753A0156	1789 LI-775 Cover plate with legend Switch/push button Single rocker Symbol "light" black matt - impuls	1789 LI-775	1	piece
2CKA001753A0073	1789 LI-783 Cover plate with legend Switch/push button Single rocker Symbol "arrows" aluminium silver - impuls	1789 LI-783	1	piece
2CKA001753A5291	1789 LI-79 Cover plate with legend Switch/push button Single rocker Symbol "light" champagne metallic - impuls	1789 LI-79	1	piece
2CKA001751A3014	1789 LI-803 Rocker with legend Switch/push button Single rocker Symbol "light" grey metallic - 63x63	1789 LI-803	1	piece
2CKA001751A2931	1789 LI-81 Rocker with legend Switch/push button Single rocker Symbol "light" anthracite - 63x63	1789 LI-81	1	piece
2CKA001751A2745	1789 LI-82 Rocker with legend Switch/push button Single rocker Symbol "light" ivory white - 63x63	1789 LI-82	1	piece

2CKA001751A2951	1789 LI-83 Rocker with legend Switch/push button Single rocker Symbol "light" aluminium silver - 63x63	1789 LI-83	1	piece
2CKA001751A3084	1789 LI-84-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Symbol "light" studio white - 63x63	1789 LI-84-500	1	piece
2CKA001751A2958	1789 LI-866 Rocker with legend Switch/push button Single rocker Symbol "light" stainless steel - Pure Stainless Steel	1789 LI-866	1	piece
2CKA001751A3031	1789 LI-884 Rocker with legend Switch/push button Single rocker Symbol "light" studio white matt - 63x63	1789 LI-884	1	piece
2CKA001751A3045	1789 LI-885 Rocker with legend Switch/push button Single rocker Symbol "light" black matt - 63x63	1789 LI-885	1	piece
2CKA001731A4011	1764 NLI-12-82-101 Rocker with labelling field Switch/push button Single push button red - 63x63	1764 NLI-12-82-101	1	piece
2CKA001751A1674	1788-20 Rocker Switch/push button Single rocker platinum - alpha	1788-20	1	piece
2CKA001751A1765	1788-21 Rocker Switch/push button Single rocker bronze - alpha	1788-21	1	piece
2CKA001751A2557	1788-22G Rocker Switch/push button Single rocker ivory - alpha	1788-22G	1	piece
2CKA001751A2326	1788-24G Rocker Switch/push button Single rocker studio white - alpha	1788-24G	1	piece
2CKA001751A2823	1788-260 Rocker Switch/push button Single rocker palladium - alpha	1788-260	1	piece
2CKA001751A2834	1788-266 Rocker Switch/push button Single rocker titanium - alpha	1788-266	1	piece
2CKA001751A3017	1788-803 Rocker Switch/push button Single rocker grey metallic - 63x63	1788-803	1	piece
2CKA001751A2927	1788-81 Rocker Switch/push button Single rocker anthracite - 63x63	1788-81	1	piece
2CKA001751A2742	1788-82 Rocker Switch/push button Single rocker ivory white - 63x63	1788-82	1	piece
2CKA001751A2954	1788-83 Rocker Switch/push button Single rocker aluminium silver - 63x63	1788-83	1	piece
2CKA001751A2750	1788-84 Rocker Switch/push button Single rocker studio white - 63x63	1788-84	1	piece
2CKA001751A2961	1788-866 Rocker Switch/push button Single rocker stainless steel - Pure Stainless Steel	1788-866	1	piece
2CKA001751A3028	1788-884 Rocker Switch/push button Single rocker studio white matt - 63x63	1788-884	1	piece
2CKA001751A3042	1788-885 Rocker Switch/push button Single rocker black matt - 63x63	1788-885	1	piece
2CKA001751A1690	1789 H-20 Rocker with legend Switch/push button Single rocker Heizung platinum - alpha	1789 H-20	1	piece
2CKA001751A1781	1789 H-21 Rocker with legend Switch/push button Single rocker Heizung bronze - alpha	1789 H-21	1	piece
2CKA001751A2573	1789 H-22G Rocker with legend Switch/push button Single rocker Heizung ivory - alpha	1789 H-22G	1	piece
2CKA001751A2375	1789 H-24G Rocker with legend Switch/push button Single rocker Heizung studio white - alpha	1789 H-24G	1	piece
2CKA001751A2826	1789 H-260 Rocker with legend Switch/push button Single rocker Heizung palladium - alpha	1789 H-260	1	piece
2CKA001751A2837	1789 H-266 Rocker with legend Switch/push button Single rocker Heizung titanium - alpha	1789 H-266	1	piece
2CKA001753A0068	1789 H-72-101 Cover plate with labelling field Switch/push button Single rocker ivory - impuls	1789 H-72-101	1	piece
2CKA001753A6588	1789 H-74-101 Cover plate with labelling field Switch/push button Single rocker alpine white - impuls	1789 H-74-101	1	piece

2CKA001753A0184	1789 H-774-101 Cover plate with labelling field Switch/push button Single rocker studio white matt - impuls	1789 H-774-101	1	piece
2CKA001753A0154	1789 H-775-101 Cover plate with labelling field Switch/push button Single rocker black matt - impuls	1789 H-775-101	1	piece
2CKA001753A0069	1789 H-783-101 Cover plate with labelling field Switch/push button Single rocker aluminium silver - impuls	1789 H-783-101	1	piece
2CKA001753A6612	1789 H-79-101 Cover plate with labelling field Switch/push button Single rocker champagne metallic - impuls	1789 H-79-101	1	piece
2CKA001751A3019	1789 H-803 Rocker with legend Switch/push button Single rocker Heizung grey metallic - 63x63	1789 H-803	1	piece
2CKA001751A2929	1789 H-81 Rocker with legend Switch/push button Single rocker Heizung anthracite - 63x63	1789 H-81	1	piece
2CKA001751A2743	1789 H-82 Rocker with legend Switch/push button Single rocker Heizung ivory white - 63x63	1789 H-82	1	piece
2CKA001751A2955	1789 H-83 Rocker with legend Switch/push button Single rocker Heizung aluminium silver - 63x63	1789 H-83	1	piece
2CKA001751A2751	1789 H-84 Rocker with legend Switch/push button Single rocker Heizung studio white - 63x63	1789 H-84	1	piece
2CKA001751A2963	1789 H-866 Rocker with legend Switch/push button Single rocker Heizung stainless steel - Pure Stainless Steel	1789 H-866	1	piece
2CKA001751A3029	1789 H-884 Rocker with legend Switch/push button Single rocker Heizung studio white matt - 63x63	1789 H-884	1	piece
2CKA001751A3043	1789 H-885 Rocker with legend Switch/push button Single rocker Heizung black matt - 63x63	1789 H-885	1	piece
2CKA001740A0071	3050 Accessories 1 gang blue	3050	1	piece
2CKA002148A0120	2148 Extension of Claws	2148	1	piece
2CKA001714A0295	2144 LI Label Braille Symbol "light"	2144 LI	1	piece
2CKA001740A0061	3048/10 Mounting box set 1 gang with Plastering moulding tool, positioning device, RFID-chip blue - Busch-axcent	3048/10	1	piece
2CKA001740A0072	3058/10 Mounting box set 1 gang blue - Busch- axcent	3058/10	1	piece
2CKA001740A0083	3068/10 Mounting box set blue - Busch-axcent	3068/10	1	piece
2CKA001784A0545	8350 Illumination set Switch/push button Orange Neon lamp 230 V	8350	1	piece
2CKA001784A0560	8352 Illumination set Switch/push button Orange Neon lamp 230 V	8352	1	piece
2CKA001784A0578	8353 Illumination set Switch/push button Orange Neon lamp 230 V	8353	1	piece
2CKA001784A0552	8360 Illumination set Orange Neon lamp 230 V red	8360	1	piece
2CKA001784A0586	8362 Illumination set Switch/push button Orange Neon lamp 230 V yellow	8362	1	piece
2CKA001784A0594	8363 Illumination set Switch/push button Orange Neon lamp 230 V white	8363	1	piece
2CKA001784A0024	8333-1 Illumination set Switch/push button White Incandescent lamp 3 ... 8 V - Busch-Duro 2000 SM	8333-1	1	piece
2CKA001784A0032	8337-1 Illumination set Switch/push button White Incandescent lamp 24 V	8337-1	1	piece
2CKA001784A0164	8344-1 Illumination set Switch/push button White Incandescent lamp 8 V	8344-1	1	piece

2CKA001784A0289	8345-1 Illumination set Switch/push button White Incandescent lamp 12 V	8345-1	1	piece
2CKA001754A4373	1721 KA-20 Cover Frame 1gang(s) platinum - alpha exclusive	1721 KA-20	1	piece
2CKA001754A4382	1721 KA-21 Cover Frame 1gang(s) bronze - alpha exclusive	1721 KA-21	1	piece
2CKA001754A3831	1721 KA-22G Cover Frame 1gang(s) ivory - alpha exclusive	1721 KA-22G	1	piece
2CKA001754A2965	1721 KA-24G Cover Frame 1gang(s) studio white - alpha exclusive	1721 KA-24G	1	piece
2CKA001754A4520	1721 KA-260-500 Cover Frame 1gang(s) palladium - alpha exclusive	1721 KA-260- 500	1	piece
2CKA001754A4509	1721 KA-266-500 Cover Frame 1gang(s) titanium - alpha exclusive	1721 KA-266- 500	1	piece
2CKA001754A4516	1721 NS-212-500 Cover Frame 1gang(s) white - Busch-Duro 2000	1721 NS-212- 500	1	piece
2CKA001754A4496	1721 NS-214-500 Cover Frame 1gang(s) alpine white - Reflex SI	1721 NS-214- 500	1	piece
2CKA001754A4093	1721 NSKA-212 Cover Frame 1gang(s) white - Busch-Duro 2000 SI Linear	1721 NSKA-212	1	piece
2CKA001754A4497	1721 NSKA-214-500 Cover Frame 1gang(s) alpine white - Reflex SI Linear	1721 NSKA-214 -500	1	piece
2CKA001754A4065	1721 NSKA-24G Cover Frame 1gang(s) studio white - alpha exclusive	1721 NSKA- 24G	1	piece
2CKA001754A4713	1721-12-182K-101 Cover Frame 1gang(s) red - future linear	1721-12-182K- 101	1	piece
2CKA001754A4240	1721-181K Cover Frame 1gang(s) anthracite - future linear	1721-181K	1	piece
2CKA001754A4168	1721-182 Cover Frame 1gang(s) ivory white - future	1721-182	1	piece
2CKA001754A4506	1721-182K-500 Cover Frame 1gang(s) ivory white - future linear	1721-182K-500	1	piece
2CKA001754A4529	1721-183K-500 Cover Frame 1gang(s) aluminium silver - future linear	1721-183K-500	1	piece
2CKA001754A4173	1721-184 Cover Frame 1gang(s) studio white - future	1721-184	1	piece
2CKA001754A4527	1721-184 NSK-500 Cover Frame 1gang(s) studio white - future linear	1721-184 NSK- 500	1	piece
2CKA001754A4504	1721-184-500 Cover Frame 1gang(s) studio white - future	1721-184-500	1	piece
2CKA001754A4498	1721-184K-500 Cover Frame 1gang(s) studio white - future linear	1721-184K-500	1	piece
2CKA001754A4521	1721-20-500 Cover Frame 1gang(s) platinum - alpha nea	1721-20-500	1	piece
2CKA001754A4522	1721-21-500 Cover Frame 1gang(s) bronze - alpha nea	1721-21-500	1	piece
2CKA001754A4775	1721-223 Cover Frame 1gang(s) glass purple - Busch-axcent	1721-223	1	piece
2CKA001754A4760	1721-225 Cover Frame 1gang(s) glass sun - Busch-axcent	1721-225	1	piece
2CKA001754A4770	1721-226 Cover Frame 1gang(s) glass avocado - Busch-axcent	1721-226	1	piece
2CKA001754A4765	1721-227 Cover Frame 1gang(s) glass coral - Busch-axcent	1721-227	1	piece
2CKA001754A4755	1721-228 Cover Frame 1gang(s) glass ocean - Busch-axcent	1721-228	1	piece
2CKA001754A4780	1721-229 Cover Frame 1gang(s) glass oyster - Busch-axcent	1721-229	1	piece
2CKA001754A4512	1721-22G-500 Cover Frame 1gang(s) ivory - alpha nea	1721-22G-500	1	piece
2CKA001754A4790	1721-243 Cover Frame 1gang(s) paper brown - Busch-axcent	1721-243	1	piece

2CKA001754A4800	1721-245 Cover Frame 1gang(s) glass black - Busch-axcent	1721-245	1	piece
2CKA001754A4785	1721-248 Cover Frame 1gang(s) paper blue - Busch-axcent	1721-248	1	piece
2CKA001754A4503	1721-24G-500 Cover Frame 1gang(s) studio white - alpha nea	1721-24G-500	1	piece
2CKA001754A4400	1721-260 Cover Frame 1gang(s) palladium - alpha nea	1721-260	1	piece
2CKA001754A4391	1721-266 Cover Frame 1gang(s) titanium - alpha nea	1721-266	1	piece
2CKA001754A4688	1721-270-500 Cover Frame 1gang(s) platinum - Busch-axcent	1721-270-500	1	piece
2CKA001754A4708	1721-275-500 Cover Frame 1gang(s) black matt - Busch-axcent	1721-275-500	1	piece
2CKA001754A4698	1721-276-500 Cover Frame 1gang(s) titanium - Busch-axcent	1721-276-500	1	piece
2CKA001754A4437	1721-280 Cover Frame 1gang(s) white glass - Busch-axcent pur	1721-280	1	piece
2CKA001754A4409	1721-281 Cover Frame 1gang(s) black - Busch-axcent	1721-281	1	piece
2CKA001753A4126	1721-281/11 Cover Frame 1gang(s) black - Busch-axcent flat	1721-281/11	1	piece
2CKA001754A4543	1721-283 Cover Frame 1gang(s) brown glass - Busch-axcent	1721-283	1	piece
2CKA001754A4331	1721-284 Cover Frame 1gang(s) studio white - Busch-axcent	1721-284	1	piece
2CKA001753A4121	1721-284/11 Cover Frame 1gang(s) studio white - Busch-axcent flat	1721-284/11	1	piece
2CKA001754A4334	1721-285 Cover Frame 1gang(s) yellow - Busch-axcent	1721-285	1	piece
2CKA001754A4337	1721-286 Cover Frame 1gang(s) green - Busch-axcent	1721-286	1	piece
2CKA001754A4340	1721-287 Cover Frame 1gang(s) red - Busch-axcent	1721-287	1	piece
2CKA001754A4343	1721-288 Cover Frame 1gang(s) blue - Busch-axcent	1721-288	1	piece
2CKA001754A4805	1721-290 Cover Frame 1gang(s) slate grey - Busch-axcent	1721-290	1	piece
2CKA001754A4471	1721-291-500 Cover Frame 1gang(s) entrée-grey - Busch-axcent	1721-291-500	1	piece
2CKA001754A4491	1721-295-500 Cover Frame 1gang(s) château-black - Busch-axcent	1721-295-500	1	piece
2CKA001754A4795	1721-298 Cover Frame 1gang(s) concrete grey - Busch-axcent	1721-298	1	piece
2CKA001754A4481	1721-299-500 Cover Frame 1gang(s) maison-beige - Busch-axcent	1721-299-500	1	piece
2CKA001754A4535	1721-80-500 Cover Frame 1gang(s) chrome - solo	1721-80-500	1	piece
2CKA001754A4538	1721-80G-500 Cover Frame 1gang(s) chrome gloss - solo	1721-80G-500	1	piece
2CKA001754A4442	1721-811 Cover Frame 1gang(s) white glass - carat	1721-811	1	piece
2CKA001754A4820	1721-815 Cover Frame 1gang(s) porcelain anthracite - carat	1721-815	1	piece
2CKA001754A4258	1721-821 Cover Frame 1gang(s) bronze - carat	1721-821	1	piece
2CKA001754A4356	1721-823-101 Cover Frame 1gang(s) gold - carat	1721-823-101	1	piece
2CKA001754A4322	1721-825 Cover Frame 1gang(s) glass black - carat	1721-825	1	piece
2CKA001754A4360	1721-826-101 Cover Frame 1gang(s) chrome - carat	1721-826-101	1	piece
2CKA001754A4605	1721-831-500 Cover Frame 1gang(s) anthracite - Busch-Dynasty	1721-831-500	1	piece

2CKA001754A4600	1721-832-500 Cover Frame 1gang(s) ivory white - Busch-Dynasty	1721-832-500	1	piece
2CKA001754A4575	1721-833-500 Cover Frame 1gang(s) polished brass decor anthracite - Busch-Dynasty	1721-833-500	1	piece
2CKA001754A4565	1721-835-500 Cover Frame 1gang(s) polished brass anthracite - Busch-Dynasty	1721-835-500	1	piece
2CKA001754A4570	1721-836-500 Cover Frame 1gang(s) polished brass decor ivory white - Busch-Dynasty	1721-836-500	1	piece
2CKA001754A4560	1721-838-500 Cover Frame 1gang(s) polished brass ivory white - Busch-Dynasty	1721-838-500	1	piece
2CKA001754A4595	1721-843-500 Cover Frame 1gang(s) antique brass decor anthracite - Busch-Dynasty	1721-843-500	1	piece
2CKA001754A4536	1721-84-500 Cover Frame 1gang(s) studio white - solo	1721-84-500	1	piece
2CKA001754A4585	1721-845-500 Cover Frame 1gang(s) antique brass anthracite - Busch-Dynasty	1721-845-500	1	piece
2CKA001754A4590	1721-846-500 Cover Frame 1gang(s) antique brass decor ivory white - Busch-Dynasty	1721-846-500	1	piece
2CKA001754A4580	1721-848-500 Cover Frame 1gang(s) antique brass ivory white - Busch-Dynasty	1721-848-500	1	piece
2CKA001754A4254	1721-860 Cover Frame 1gang(s) stainless steel - carat	1721-860	1	piece
2CKA001754A4500	1721-866K-500 Cover Frame 1gang(s) stainless steel - Pure Stainless Steel	1721-866K-500	1	piece
2CKA001754A4531	1721-884K-500 Cover Frame 1gang(s) studio white matt - future linear	1721-884K-500	1	piece
2CKA001754A4532	1721-885K-500 Cover Frame 1gang(s) black matt - future linear	1721-885K-500	1	piece
2CKA001754A4374	1722 KA-20 Cover Frame 2gang(s) platinum - alpha exclusive	1722 KA-20	1	piece
2CKA001754A4383	1722 KA-21 Cover Frame 2gang(s) bronze - alpha exclusive	1722 KA-21	1	piece
2CKA001754A3849	1722 KA-22G Cover Frame 2gang(s) ivory - alpha exclusive	1722 KA-22G	1	piece
2CKA001754A2999	1722 KA-24G Cover Frame 2gang(s) studio white - alpha exclusive	1722 KA-24G	1	piece
2CKA001754A4116	1722 KA-260 Cover Frame 2gang(s) palladium - alpha exclusive	1722 KA-260	1	piece
2CKA001754A4523	1722 KA-266-500 Cover Frame 2gang(s) titanium - alpha exclusive	1722 KA-266- 500	1	piece
2CKA001754A2239	1722 NS-212 Cover Frame 2gang(s) white - Busch-Duro 2000	1722 NS-212	1	piece
2CKA001754A2163	1722 NS-214 Cover Frame 2gang(s) alpine white - Reflex SI	1722 NS-214	1	piece
2CKA001754A4094	1722 NSKA-212 Cover Frame 2gang(s) white - Busch-Duro 2000 SI Linear	1722 NSKA-212	1	piece
2CKA001754A4059	1722 NSKA-214 Cover Frame 2gang(s) alpine white - Reflex SI Linear	1722 NSKA-214	1	piece
2CKA001754A4066	1722 NSKA-24G Cover Frame 2gang(s) studio white - alpha exclusive	1722 NSKA- 24G	1	piece
2CKA001754A4714	1722-12-182K-101 Cover Frame 2gang(s) red - future linear	1722-12-182K- 101	1	piece
2CKA001754A4241	1722-181K Cover Frame 2gang(s) anthracite - future linear	1722-181K	1	piece
2CKA001754A4169	1722-182 Cover Frame 2gang(s) ivory white - future	1722-182	1	piece
2CKA001754A4231	1722-182K Cover Frame 2gang(s) ivory white - future linear	1722-182K	1	piece
2CKA001754A4530	1722-183K-500 Cover Frame 2gang(s) aluminium silver - future linear	1722-183K-500	1	piece
2CKA001754A4174	1722-184 Cover Frame 2gang(s) studio white - future	1722-184	1	piece

2CKA001754A4508	1722-184-500 Cover Frame 2gang(s) studio white - future	1722-184-500	1	piece
2CKA001754A4499	1722-184K-500 Cover Frame 2gang(s) studio white - future linear	1722-184K-500	1	piece
2CKA001754A4524	1722-20-500 Cover Frame 2gang(s) platinum - alpha nea	1722-20-500	1	piece
2CKA001754A1710	1722-21 Cover Frame 2gang(s) bronze - alpha nea	1722-21	1	piece
2CKA001754A4776	1722-223 Cover Frame 2gang(s) glass purple - Busch-axcent	1722-223	1	piece
2CKA001754A4761	1722-225 Cover Frame 2gang(s) glass sun - Busch-axcent	1722-225	1	piece
2CKA001754A4771	1722-226 Cover Frame 2gang(s) glass avocado - Busch-axcent	1722-226	1	piece
2CKA001754A4766	1722-227 Cover Frame 2gang(s) glass coral - Busch-axcent	1722-227	1	piece
2CKA001754A4756	1722-228 Cover Frame 2gang(s) glass ocean - Busch-axcent	1722-228	1	piece
2CKA001754A4781	1722-229 Cover Frame 2gang(s) glass oyster - Busch-axcent	1722-229	1	piece
2CKA001754A3799	1722-22G Cover Frame 2gang(s) ivory - alpha nea	1722-22G	1	piece
2CKA001754A4791	1722-243 Cover Frame 2gang(s) paper brown - Busch-axcent	1722-243	1	piece
2CKA001754A4801	1722-245 Cover Frame 2gang(s) glass black - Busch-axcent	1722-245	1	piece
2CKA001754A4786	1722-248 Cover Frame 2gang(s) paper blue - Busch-axcent	1722-248	1	piece
2CKA001754A4511	1722-24G-500 Cover Frame 2gang(s) studio white - alpha nea	1722-24G-500	1	piece
2CKA001754A4401	1722-260 Cover Frame 2gang(s) palladium - alpha nea	1722-260	1	piece
2CKA001754A4392	1722-266 Cover Frame 2gang(s) titanium - alpha nea	1722-266	1	piece
2CKA001754A4689	1722-270-500 Cover Frame 2gang(s) platinum - Busch-axcent	1722-270-500	1	piece
2CKA001754A4709	1722-275-500 Cover Frame 2gang(s) black matt - Busch-axcent	1722-275-500	1	piece
2CKA001754A4699	1722-276-500 Cover Frame 2gang(s) titanium - Busch-axcent	1722-276-500	1	piece
2CKA001754A4438	1722-280 Cover Frame 2gang(s) white glass - Busch-axcent pur	1722-280	1	piece
2CKA001754A4410	1722-281 Cover Frame 2gang(s) black - Busch-axcent	1722-281	1	piece
2CKA001753A4127	1722-281/11 Cover Frame 2gang(s) black - Busch-axcent flat	1722-281/11	1	piece
2CKA001754A4544	1722-283 Cover Frame 2gang(s) brown glass - Busch-axcent	1722-283	1	piece
2CKA001754A4332	1722-284 Cover Frame 2gang(s) studio white - Busch-axcent	1722-284	1	piece
2CKA001753A4122	1722-284/11 Cover Frame 2gang(s) studio white - Busch-axcent flat	1722-284/11	1	piece
2CKA001754A4335	1722-285 Cover Frame 2gang(s) yellow - Busch-axcent	1722-285	1	piece
2CKA001754A4338	1722-286 Cover Frame 2gang(s) green - Busch-axcent	1722-286	1	piece
2CKA001754A4341	1722-287 Cover Frame 2gang(s) red - Busch-axcent	1722-287	1	piece
2CKA001754A4344	1722-288 Cover Frame 2gang(s) blue - Busch-axcent	1722-288	1	piece
2CKA001754A4806	1722-290 Cover Frame 2gang(s) slate grey - Busch-axcent	1722-290	1	piece

2CKA001754A4472	1722-291-500 Cover Frame 2gang(s) entrée-grey - Busch-axcent	1722-291-500	1	piece
2CKA001754A4492	1722-295-500 Cover Frame 2gang(s) château-black - Busch-axcent	1722-295-500	1	piece
2CKA001754A4796	1722-298 Cover Frame 2gang(s) concrete grey - Busch-axcent	1722-298	1	piece
2CKA001754A4482	1722-299-500 Cover Frame 2gang(s) maison-beige - Busch-axcent	1722-299-500	1	piece
2CKA001754A4537	1722-80-500 Cover Frame 2gang(s) chrome - solo	1722-80-500	1	piece
2CKA001754A4327	1722-80G Cover Frame 2gang(s) chrome gloss - solo	1722-80G	1	piece
2CKA001754A4443	1722-811 Cover Frame 2gang(s) white glass - carat	1722-811	1	piece
2CKA001754A4821	1722-815 Cover Frame 2gang(s) porcelain anthracite - carat	1722-815	1	piece
2CKA001754A4259	1722-821 Cover Frame 2gang(s) bronze - carat	1722-821	1	piece
2CKA001754A4357	1722-823-101 Cover Frame 2gang(s) gold - carat	1722-823-101	1	piece
2CKA001754A4323	1722-825 Cover Frame 2gang(s) glass black - carat	1722-825	1	piece
2CKA001754A4361	1722-826-101 Cover Frame 2gang(s) chrome - carat	1722-826-101	1	piece
2CKA001754A4606	1722-831-500 Cover Frame 2gang(s) anthracite - Busch-Dynasty	1722-831-500	1	piece
2CKA001754A4601	1722-832-500 Cover Frame 2gang(s) ivory white - Busch-Dynasty	1722-832-500	1	piece
2CKA001754A4576	1722-833-500 Cover Frame 2gang(s) polished brass decor anthracite - Busch-Dynasty	1722-833-500	1	piece
2CKA001754A4566	1722-835-500 Cover Frame 2gang(s) polished brass anthracite - Busch-Dynasty	1722-835-500	1	piece
2CKA001754A4571	1722-836-500 Cover Frame 2gang(s) polished brass decor ivory white - Busch-Dynasty	1722-836-500	1	piece
2CKA001754A4561	1722-838-500 Cover Frame 2gang(s) polished brass ivory white - Busch-Dynasty	1722-838-500	1	piece
2CKA001754A4596	1722-843-500 Cover Frame 2gang(s) antique brass decor anthracite - Busch-Dynasty	1722-843-500	1	piece
2CKA001754A4539	1722-84-500 Cover Frame 2gang(s) studio white - solo	1722-84-500	1	piece
2CKA001754A4586	1722-845-500 Cover Frame 2gang(s) antique brass anthracite - Busch-Dynasty	1722-845-500	1	piece
2CKA001754A4591	1722-846-500 Cover Frame 2gang(s) antique brass decor ivory white - Busch-Dynasty	1722-846-500	1	piece
2CKA001754A4581	1722-848-500 Cover Frame 2gang(s) antique brass ivory white - Busch-Dynasty	1722-848-500	1	piece
2CKA001754A4255	1722-860 Cover Frame 2gang(s) stainless steel - carat	1722-860	1	piece
2CKA001754A4501	1722-866K-500 Cover Frame 2gang(s) stainless steel - Pure Stainless Steel	1722-866K-500	1	piece
2CKA001754A4415	1722-884K Cover Frame 2gang(s) studio white matt - future linear	1722-884K	1	piece
2CKA001754A4534	1722-885K-500 Cover Frame 2gang(s) black matt - future linear	1722-885K-500	1	piece
2CKA001754A4376	1723 KA-20 Cover Frame 3gang(s) platinum - alpha exclusive	1723 KA-20	1	piece
2CKA001754A4385	1723 KA-21 Cover Frame 3gang(s) bronze - alpha exclusive	1723 KA-21	1	piece
2CKA001754A3856	1723 KA-22G Cover Frame 3gang(s) ivory - alpha exclusive	1723 KA-22G	1	piece
2CKA001754A3021	1723 KA-24G Cover Frame 3gang(s) studio white - alpha exclusive	1723 KA-24G	1	piece
2CKA001754A4118	1723 KA-260 Cover Frame 3gang(s) palladium - alpha exclusive	1723 KA-260	1	piece

2CKA001754A4127	1723 KA-266 Cover Frame 3gang(s) titanium - alpha exclusive	1723 KA-266	1	piece
2CKA001754A3708	1723 NS-212 Cover Frame 3gang(s) white - Busch-Duro 2000	1723 NS-212	1	piece
2CKA001754A3724	1723 NS-214 Cover Frame 3gang(s) alpine white - Reflex SI	1723 NS-214	1	piece
2CKA001754A4096	1723 NSKA-212 Cover Frame 3gang(s) white - Busch-Duro 2000 SI Linear	1723 NSKA-212	1	piece
2CKA001754A4061	1723 NSKA-214 Cover Frame 3gang(s) alpine white - Reflex SI Linear	1723 NSKA-214	1	piece
2CKA001754A4068	1723 NSKA-24G Cover Frame 3gang(s) studio white - alpha exclusive	1723 NSKA-24G	1	piece
2CKA001754A4242	1723-181K Cover Frame 3gang(s) anthracite - future linear	1723-181K	1	piece

Catégories

Produits basse tension → Wiring Accessories - Light Switch Ranges → Flush Mounted Inserts → Mechanical Inserts

