



Push-button interface plus

Operating instructions



Push-button interface 2-gang plus
Art. no. MTN670802

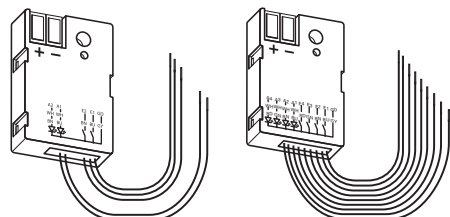

Push-button interface 4-gang plus
Art. no. MTN670804

For your safety



DANGER

Risk of fatal injury from electrical current.

All work on the device should only be carried out by trained and skilled electricians. The country-specific regulations and the valid KNX guidelines must be followed.



CAUTION

The device could become damaged.

- Only operate the device according to the specifications stated in the Technical data.
- High voltages can cause damage. Never connect the device to 230 V!

Push-button interface introduction

The push-button interface for KNX has two (art. no. MTN670802) or four (art. no. MTN670804) inputs and outputs. The inputs can be used to establish binary statuses (via floating contacts) and the outputs can be used to activate control lamps (low current LEDs).


For example, by connecting floating push-buttons or switches to the inputs, you can use the KNX to perform a range of functions including switching, dimming, operating blinds and retrieving scenes, etc.

To check statuses, you can connect control lamps (low current LEDs, e.g. in the switch) to the outputs and activate them via KNX.

The contact supply voltage (SELV) for the connected buttons/switches and the control lamps comes from the push-button interface.

The push-button interface has a bus coupler.

Operating and display elements

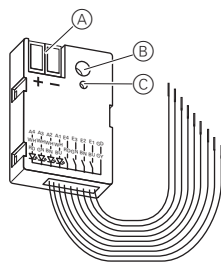


- (A) Bus connection
- (B) Programming button
- (C) Programming LED

Push-button interface installation

- (1) Mount the push-button interface in
 - a flush-mounted box at least 40 mm deep,
 - a cavity wall installation box ($\varnothing = 60$ mm),
 - a junction box.
- (2) Connect inputs to a floating push-button or switch (see connection example).
- (3) Connect outputs to control lamps (low-current LEDs) in the push-button or switch (see connection example).

Connection example:

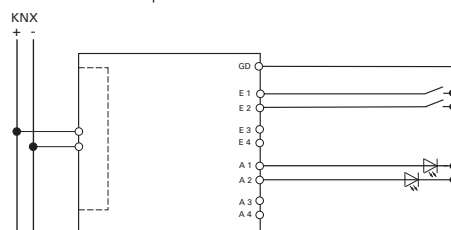

Colour coding of the incoming cables

GD	grey:	Reference potential (GD)
E1	blue:	Input 1
E2	brown:	Input 2
E3	green:	Input 3 *
E4	red:	Input 4 *
A1	white/blue:	Output 1
A2	white/brown:	Output 2
A3	white/green:	Output 3 *
A4	white/red:	Output 4 *

* (only art. no. MTN670804)




WARNING


Risk of fatal injury from electrical current.

The device could be damaged.

Safety clearance must be guaranteed in accordance with IEC 60664-1. There must be at least 4 mm between the individual cores of the 230 V supply cable and the KNX line.

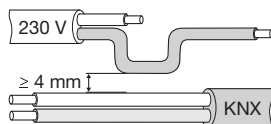

- (4) Connect the bus wires to the bus connecting terminal.

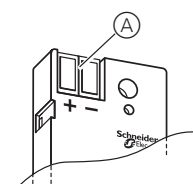

- (5) Connect the bus terminal to the bus connection (A).

Putting push-button interface into operation

- (1) Press the programming button.

The programming LED lights up.

- (2) Load the physical address and the application into the device from the ETS.

The application was loaded successfully, the device is ready for operation.

Technical data

Initialisation:	The push-button interface is only ready for operation after at least 17 seconds after a bus voltage failure or a bus reset.
Power supply from bus:	DC 24 V / < 10 mA
Inputs	
Use:	connection of floating contacts
Contact resistance:	< 500 Ω (with closed contact)
Outputs	
Use:	connection of low-current LEDs (< 1 mA)
Contact voltage V_k :	< 3 V (SELV)
Contact current:	< 0.5 mA
Ambient temperature	
Operation	-5 °C to +45 °C
Storage	-25 °C to +55 °C
Transport	-25 °C to +70 °C
Max. humidity:	93 % relative humidity, no moisture condensation
Environment:	The device is designed for use at a height of up to 2000 m above sea level (MSL).
Protection class:	II
Type of protection:	IP 20
Connections	
Inputs, outputs:	
Art. no. MTN670802	each 2 and GD, single-core
Art. no. MTN670804	each 4 and GD, single-core
Maximum cable length:	7.5 m

Schneider Electric Industries SAS

If you have technical questions, please contact the Customer Care Center in your country.

www.schneider-electric.com

This product must be installed, connected and used in compliance with prevailing standards and/or installation regulations. As standards, specifications and designs develop from time to time, always ask for confirmation of the information given in this publication.

Multi-function.counter, LED 122A/1.0

Multi-function.counter, LED 122A/1.0

General information

You can use this application to program the push-button interface.

Up to two objects are available for each input.

Group addresses are managed dynamically. Maximum no. of group addresses and associations: 150.

Application functions

This application offers a wide range of setting options in order to execute numerous functions with a push-button interface and controlled KNX devices (e.g. dimming actuators, switch actuators etc).

Naturally, which function is possible in each individual case depends on the KNX devices being controlled.

The functions of this application described here can therefore only apply to those specific KNX control functions. Here, only those tabs and parameters which are of relevance to these control functions are described.

You will find an overview of all the tabs, parameters and the related adjustable values in the last section "Parameters and settings".

i The following description assumes that push-buttons are connected to the inputs of the push-button interface, and that (status) LEDs are connected to the outputs.

i Adjustable times (staircase timer, ON delay, OFF delay etc.) are adjusted via the time base and time factor parameters. The actual time is calculated by multiplying both values; e.g. time base 1 second times time factor 3 gives 3 seconds.

If only one of these parameters is shown, no time adjustment is possible for the parameter setting selected.

Basic settings

Device selection

i First you must adapt the application to the hardware used, since when the device selection is toggled, parameter settings and related group addresses are changed by ETS. Select the "2-gang" or "4-gang" setting.

Tab	Parameter
General	Push-button interface

Operating mode

For the input functions, you can select between the "Make contact" and "Break contact" operating modes.

Tab	Parameter
Input X	Operating mode

Additional startup delay of the application

You can start up the application later after the bus voltage has been switched on.

Tab	Parameter
General	Additional startup delay of the application

Debounce time

You can set a debounce time.

Tab	Parameter
General	Debounce time

Transmit 1/8 bit toggle commands

You can address two actor groups with 1 or 8 bits (1 byte) simultaneously.

With a 1 bit object type, the object value is first inverted with each push-button action, then sent on the bus, i. e. a "0" becomes a "1", and when the same key is pushed again, a "1" becomes a "0". The device is therefore switched on and off alternately. This switching behaviour is called "toggling". An update or change to the 1-bit/1-byte object value is possible via the bus when another sensor switches the actuator (e.g. via a two-way circuit or a central command). To prevent "incorrect" toggling, you must load the status of the actuator ("1" or "0") into the push-button interface. To do this, connect the group address of the second sensor to the switch/value object of the push-button interface.

For 1-byte object types, you can set two values, which are transmitted alternately after each push-button action.

Two objects can also be sent in any combination when the push-button is activated (1 bit / 1 byte).

Tab	Parameter
Input X	Functional selection
	Number of objects
	Object A/B
	Value 1/2

Multi-function.counter, LED 122A/1.0

Communication objects

You can select the following communication objects:

Per input:

Function	Object name	Type	Prio	Flags	Behaviour
Input X	Switch object A/B	1 bit	Low	WCT	Transmit/ receive

Transmit 1/8 bit switching commands

You can address two actuator groups with 1 or 8 bits simultaneously.

Depending on the parameter settings, one of the following will be transmitted via the switch/value object whenever a key is pressed:

- an ON or OFF telegram
- 1 byte values (0 % - 100 % in levels)
- 1 byte values (0 - 255) infinitely
- two objects, (1 bit / 1 byte) in any combination sent via the switch/value object.

Tab	Parameter
Input X	Functional selection
	Number of objects
	Object A/B
	Value

Communication objects

You can select the following communication objects:

Per input:

Function	Object name	Type	Prio	Flags	Behaviour
Input X	Switch object A/B	1 bit	Low	WCT	Transmit/ receive

Dimming

You can use the dimming function for the following:

- dim brighter **and** darker via **one key** (single-surface dimming)
- either dim brighter **or** darker. You need a second key (second input) to dim in the other direction (dual-surface dimming).

You can use the corresponding key (input) to switch the light on or off (press key briefly) or dim it (press key for a longer period, the parameters for the exact period can be set). When switching takes place, an ON/OFF telegram is sent via the switch object. When dimming, dimming up or dimming down is carried out via the 4-bit dimming object; the parameters for the dimming steps can be set. In addition, you can also transmit the corresponding dimming step cyclically for a period of time which can be set as required.

Common parameters for single-surface and dual-surface dimming

Tab	Parameter
Input X	Functional selection
	Detection of prolonged activation 100 ms * Factor (4-250)
	Dimming direction
	Cyclical sending of the dimming levels
	<i>only with cyclical transmission of the dimming steps:</i> Base for cyclic interval
	<i>only with cyclical transmission of the dimming steps:</i> Factor for cyclic interval (3-255)

Additional parameters for single-surface dimming

You can dim brighter or darker and also switch on or off using a single key.

The current switching or dimming direction is always dependent on the previous action, i. e. if switched off, pressing the key briefly will switch the light on and vice versa, and if the light has been dimmed up, prolonged activation of the key will dim the light down again. On release after prolonged activation, a stop telegram will be sent via the 4-bit dimming object, thus terminating the dimming procedure in the dimming actuator.

An update or change to the switch/object value is possible via the bus when another sensor switches or dims the actuator (e.g. via a two-way circuit or a central command). To prevent the "wrong" switching/dimming activity, you must load the status of the actuator into the push-button interface. To do this, connect the group address of the second sensor to the switch/dimming object of the push-button interface.

A single command is sufficient to cycle through the dimming range. This dimming procedure can be used for most applications. The other possible dimming steps (1/2 - 1/64 brighter or darker) dim brighter or darker by the selected step. For example, to dim from min. to max. brightness, you would need to push the key for a prolonged period four times in succession if the level set is 1/4.

Tab	Parameter
Input X	Dimming direction
	Dimming steps (brighter)
	Dimming steps (darker)

"Dimming direction" parameter value for single-surface dimming:

- brighter and darker

Multi-function.counter, LED 122A/1.0

Additional parameters for dual-surface dimming

These are used to dim either brighter or darker and to either switch on or off using a single key. Therefore, you must set the parameters for a second key (second input) for the opposite direction.

You can set whether a stop telegram is to be transmitted when the key is released. When you have enabled the transmission of a stop telegram, a stop telegram will be sent via the 4-bit dimming object after prolonged activation of the key, thus terminating the dimming procedure in the dimming actuator.

A single command is sufficient to cycle through the dimming range. This dimming procedure can be used for most applications. The other possible dimming steps (1/2 - 1/64 brighter or darker) dim brighter or darker by the selected step. For example, to dim from min. to max. brightness, you would need to push the key for a prolonged period four times in succession if the level set is 1/4.

Tab	Parameter
Input X	Dimming direction
	<i>only in the dimming direction "brighter":</i> dimming steps (brighter)
	<i>only in the dimming direction "darker":</i> dimming steps (darker)
	Stop telegram after release

"Dimming direction" parameter value for dual-surface dimming:

- brighter
- darker

Communication objects

You can select the following communication objects:

Per input:

Function	Object name	Type	Prio	Flags	Behaviour
Input X	Switch object	1 bit	Low	WCT	Transmit/ receive
Input X	Dimming object	4 bit	Low	WCT	Transmit/ receive

Blind control

You can use the blind control function to do the following:

- move the blind using an individual key and adjust the slats (single-surface blind operation).
- With the blind control function, you can raise the blinds / adjust the slats using a single key and lower the blinds / adjust the slats using a second key (dual-surface blind operation).
- Move the blind to a pre-specified position.
- Move the blind between two previously specified positions.

Tab	Parameter
Input X	Functional selection

Blind control function up or down with one key in each case (dual-surface blind operation)

After the corresponding key is pressed for a short time, a stop/step telegram will be transmitted; after the key is activated for a prolonged period (the parameters for the exact period can be set), a movement telegram will be transmitted. With this function, you must set the parameters for a second key (second input) with the corresponding settings for the blind movement in the opposite direction. Both keys (inputs) must be given the same group addresses.

Tab	Parameter
Input X	Functional selection
	Detection of prolonged activation from 100 ms * Factor (4-250)
	Direction of movement

Blind control function up or down with a single key (single-surface blind operation)

The current direction of movement of the blind, or the direction of the slat adjustment, always depends on the previous action, i. e. when the blind has just been moved downwards, it will move upwards the next time the key is activated for a long period (parameters for the period can be set).

After a stop/step telegram has been transmitted to adjust the slats, a stop/step telegram for the same direction of movement can be created by pressing the key again, as long as this subsequent push-button action is carried out within a time period, the parameters for which can be set. If this time period has elapsed, the direction of rotation of the slats will change when the key is pressed briefly.

Multi-function.counter, LED 122A/1.0

The push-button (input) can receive telegrams via the stop/step movement objects, and can create corresponding telegrams when the key is pressed, depending on the values received. An update or change to the switch/object value is possible via the bus when another sensor switches the actuator (e.g. via a two-way circuit or a central command). To prevent "incorrect" movement, you must load the status of the actuator into the push-button. To do this, connect the group address of the second sensor to the stop/step and the movement object of the push-button interface.

Tab	Parameter
Input X	Detection of prolonged activation from 100 ms * Factor (4-250)
	Direction of movement
	Change in direction for slat adjustment from 100 ms * Factor (5-50)

Move the blind to a pre-specified position.

If the blind actuator is capable of approaching a specific position, you can define one or two positions using this function, which can be approached by the blind using 1-byte position values with a push-button action. The position values can be set in steps between 0% and 100%, or infinitely from 0-255.

When approaching a position, the set value for the blind position and the slat position is transmitted using a short (or long) push-button action.

To trigger two positions, enter the required blind position and slat position for both. Position value 1 is transmitted with a short push-button action, while position value 2 is transmitted with a long push-button action. No movement or stop/step objects exist with these set parameters.

Tab	Parameter
Input X	Direction of movement
	Selecting the positioning
	Position value 1 (press briefly)
	Value for blind position
	Value for slat position
	<i>only with "two positions":</i> Position value 2 (press for long period)

Communication objects

You can select the following communication objects:

Per input:

Function	Object name	Type	Prio	Flags	Behaviour
Input X	Stop/step object	1 bit	Low	CT	Transmit/receive
Input X	Movement object	1 bit	Low	CT	Transmit/receive
Input X	Blind position	1 byte	Low	CT	Transmit/receive
Input X	Slat position	1 byte	Low	CT	Transmit/receive

Transmit 1 bit, 2 bit (priority control), 4 bit or 1 byte pulse edge commands

You can use these pulse edge functions to parameterise different object actions. You can transmit one or two objects simultaneously, and select the size of the objects required (1 bit, 2 bit priority control, 4 bit or 1 byte in steps or infinitely) as needed. This enables you to parameterise a large number of application options.

You can specify which actions should be carried out when a key is pressed, and which should be carried out when a key is released. These actions could include:

- Transmit 1 or 0 (with 1 bit)
- Transmit value 1 or value 2 (with 2 bits, 4 bits or 1 byte):
You can enter two values and set whether and how they are to be transmitted.
- Transmitting a value:
The object transmits the value which it has currently been given. You can therefore transfer a value e.g. with the transmitting group address which was previously received by another group address.
- Toggling:
The current object value is inverted and then transmitted. It is therefore switched on and off alternately (toggled). The value can be modified via the bus.
- no action

Tab	Parameter
Input X	Functional selection
	Pulse edge function
	<i>only with extended pulse edge function:</i> Detection of prolonged activation from 100 ms * Factor (4-250)
	Number of objects

Multi-function.counter, LED 122A/1.0

Normal pulse edge function


With the standard pulse edge function, you can transmit 1 bit, 2 bit, 4 bit priority control or 1 byte in steps or infinitely.

Tab	Parameter
Input X - (object A&B)	Object A/B
	Action on activation
	Action on release
	<i>only with 2 bit and 4 bit (priority control):</i> value 1 / value 2
	<i>only with 1 byte in steps 0 - 100 %</i> value 1 / value 2
	<i>only with 1 byte infinitely 0-255:</i> value 1 / value 2


Principle of the pulse edge function

Using the following diagrams, you can see how the pulse edge function behaves when pulse edges rise or fall.


Object A = 1 Bit
action at pressed/released

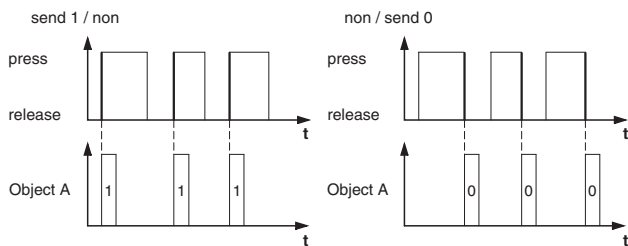


Object A = 1 Bit
action at pressed/released

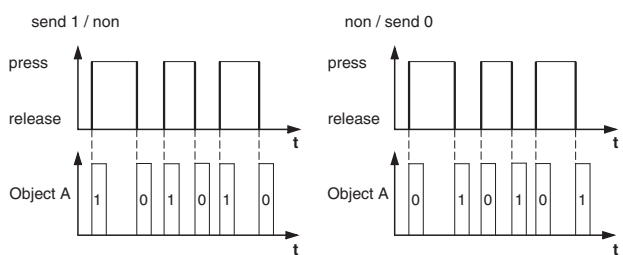

Object A = 1 Bit
action at pressed/released

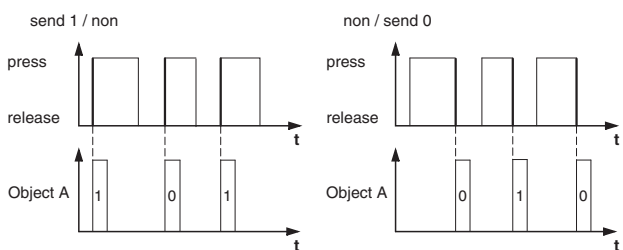


Object A = 1 Byte variable 0-255
value 1 = 255
value 2 = 50
action at pressed/released

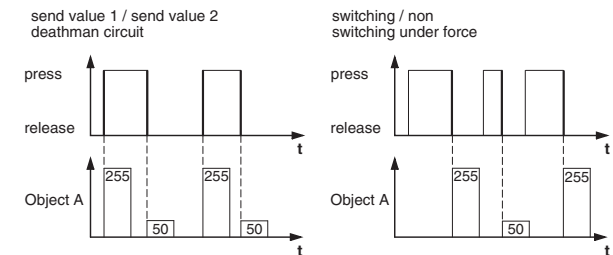

Example: Function "death man circuit" or "switching under force"

Object A = 2 Bit (guidance under force)
value 1 = 11 (switching on under force)
value 2 = 10 (switching off under force)
Action at pressed/released

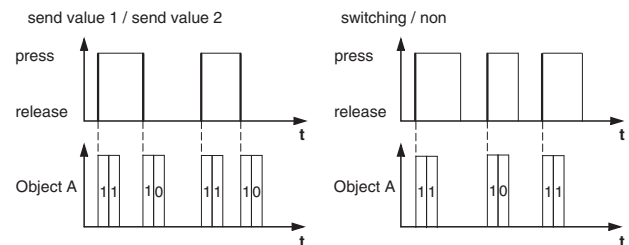

Extended pulse edge function

With the extended pulse edge function, you have a wider range of functions available, e. g. you can set different actions with a shorter or longer activation time, which apply to both the actions which result when the key is pressed and when the key is released. You can also set a cycle time which can be parameterised for each object.

i When parameterising, bear in mind that you need to set all four types of key activation (brief/long, pressing and releasing the key) in order to ensure that the push-button (input) functions as required.

Tab	Parameter
Input X - (object A&B)	Object A/B


Multi-function.counter, LED 122A/1.0

A description of the most important actions is given below:

- transmits [value]:
transmits the current value and stops a cyclical transmission.
- transmits [value] immediately and then cyclically:
If no cycle time is running, [value] is transmitted immediately and a new cycle time is started. If a cycle time is already running, this is interrupted, [value] is transmitted and a new cycle time is started.
- transmits [value] only cyclically:
If no cycle time is running, [value] is transmitted immediately and a new cycle time is started. If a cycle time is already running, this is **not** interrupted, [value] is transmitted after the current cycle time has elapsed, and a new cycle time is started.
- sets object value to [value] (readable only)
[value] is written into the object and is not transmitted. An active cycle time is terminated.
- toggles:
compares the current object value with [value]. If both are the same, value 1 or value 2 is transmitted. If both are different, [value] is transmitted.
- toggles, transmits immediately, then cyclically:
The value is toggled (see "toggles") if no cycle time is running, transmitted immediately and a new cycle time is started. If a cycle time is already running, this is interrupted, the toggled value is transmitted and a new cycle time is started. Subsequently, the value which has already been toggled is always transmitted cyclically.
- toggles, only transmits cyclically:
If no cycle time is running, the toggled value is transmitted immediately and a new cycle time is started. If a cycle time is already running, this is **not** interrupted, the toggled value is transmitted after the current cycle time has elapsed, and a new cycle time is started. Subsequently, the value which has already been toggled is always transmitted cyclically.
- toggles and is not transmitted:
The toggled value is written into the object and is not transmitted. An active cycle time is terminated.
- toggles cyclically, transmits immediately, then cyclically:
The value is toggled (see "toggles") if no cycle time is running, transmitted immediately and a new cycle time is started. If a cycle time is already running, this is interrupted, the toggled value is transmitted and a new cycle time is started. It is always subsequently cyclically toggled, and the new value is transmitted.
- toggles cyclically, only transmits cyclically:
If no cycle time is running, the toggled value is transmitted immediately and a new cycle time is started. If a cycle time is already running, this is **not** interrupted, the toggled value is transmitted after the current cycle time has elapsed, and a new cycle time is started. It is always subsequently cyclically toggled, and the new value is transmitted.
- toggles cyclically and is not transmitted:
The toggled value is written into the object and is **not** transmitted. It is always subsequently cyclically toggled, and the new value is written into the object.
- transmits its value:
The current object value is transmitted. An active cycle time is terminated.
- sends its value immediately and then cyclically:
If no cycle time is running, the current object value is transmitted immediately and a new cycle time is started. If a cycle time is already running, this is interrupted, the current object value is transmitted and a new cycle time is started. Subsequently, the current object value is always transmitted cyclically.
- increase the current object value by [value] cyclically:
If no cycle time is running, [value] is added to the current object value, the object value is transmitted, and a new cycle time is started. If a cycle time is already running, this is **not** interrupted, the current object value with [value] added is transmitted and a new cycle time is started.
- reduce the current object value by [value] cyclically:
If no cycle time is running, [value] is subtracted from the current object value, the object value is transmitted, and a new cycle time is started. If a cycle time is already running, this is **not** interrupted, the current object value with [value] subtracted is transmitted and a new cycle time is started.
- transmits [valueA] and after a cycle time [valueB]:
[ValueA] is transmitted immediately, and [valueB] is transmitted after **one** cycle time, regardless of whether a cycle time is already running or not (staircase timer function).
- none (stops cyclical transmission):
No action is carried out, and any active cycle time is stopped.
- no change:
The current action remains unchanged (e. g. "transmits value1 and after a cycle time, transmits value2").
- none (stop after current cycle time has elapsed):
No action is currently carried out, but any active cycle time is **not** stopped. It runs through until the end, and then transmits the corresponding value.

Examples of use for the pulse edge function

The following activation sequence diagram shows the phases into which the pulse edge function is divided:

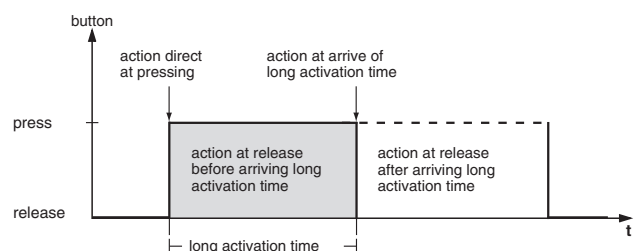

Example: Staircase lighting function with cleaning lighting function

With a brief push-button action, the switch actuator switches on the light. A long push-button action extends the staircase lighting function (= cleaning lighting function) until a second, long push-button action switches off the actuator. The switch actuator requires a staircase lighting function and a disable function for this function.


Number of objects = 2 (object A/B)

Object A/B = 1 bit

Object A: Action on release before the long activation time has elapsed = transmits 1

Object B: Action on completion of the long activation time = toggles

To do this, connect object A with the switch object and object B with the disable object of the switch actuator.

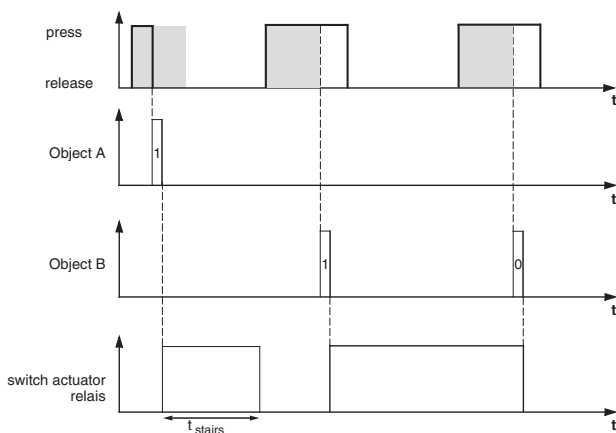

Example: short and long staircase time

You can use this function to produce a brief and a long staircase time with the push-button. The switch actuator requires no staircase lighting function for this request.

With a brief push-button action, the switch actuator switches on the light, and after a parameterised cycle time (e. g. 3 minutes), it switches it back off again. With a long push-button action, the same function is carried out, but with a longer cycle time (e. g. 6 minutes).


Number of objects = 2 (object A/B)

Object A/B = 1 bit

Object A: Action on release before the long activation time has elapsed = transmits 1. After a cycle time has elapsed (here 3 minutes) = transmits 0

Object B: Action on release when the long activation time is completed = transmits 1. After a cycle time has elapsed (here 6 minutes) = transmits 0

To do this, connect object A and object B with the switch object of the switch actuator.

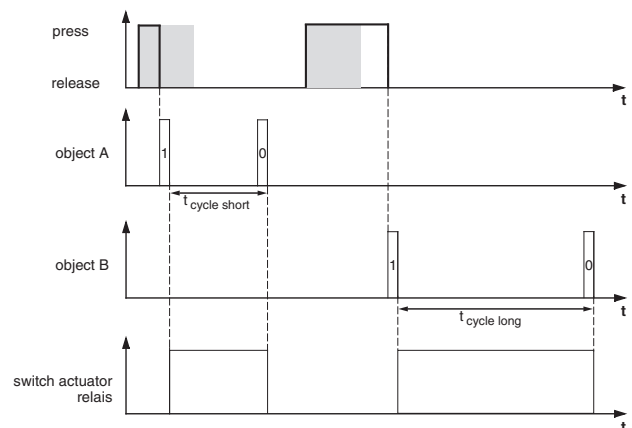

Example: Switch the light on/off permanently, or switch off after a cycle time has elapsed.

With a brief push-button action, the switch actuator switches the light on or off permanently. With a long push-button action, the light switches on, and after a parameterised cycle time (e .g. 6 minutes), it switches back off again. Due to the cycle time in the push-button which can be parameterised, the switch actuator requires no staircase lighting function for this function.

Number of objects = 2 (object A/B)

Object A/B = 1 bit

Object A: Action on release before the long activation time has elapsed = toggles

Object B: Action when the long activation time is completed = transmits 1. After a cycle time has elapsed (here 6 minutes) = transmits 0. Action on release when the long activation time is completed = no change.

To do this, connect object A and object B with the switch object of the switch actuator.

Multi-function.counter, LED 122A/1.0

Example: electronic protection against theft


This example will show you how to program electronic protection against theft for the push-button. It is activated by a brief push-button action and then transmits cyclically. As soon as the push-button is forcibly separated from the push-button interface, this can be shown on a display, or an alarm can be triggered.

Number of objects = 1 (object A)

Object A = 1 bit

Object A: Action on release before the long activation time has elapsed = transmits 1 immediately and then cyclically. Action when the long activation time is completed = no change. Action on release after the long activation time is completed = no change. Cycle time = e. g. 10 minutes

To do this, connect object A with an object which anticipates cyclical telegrams (e. g. a safety object). The monitoring time set on the safety object must be longer than the cycle time of the push-button. If the safety object receives no telegrams from the push-button during this time, a reaction which can be parameterised is activated (e. g. the channel is switched on).

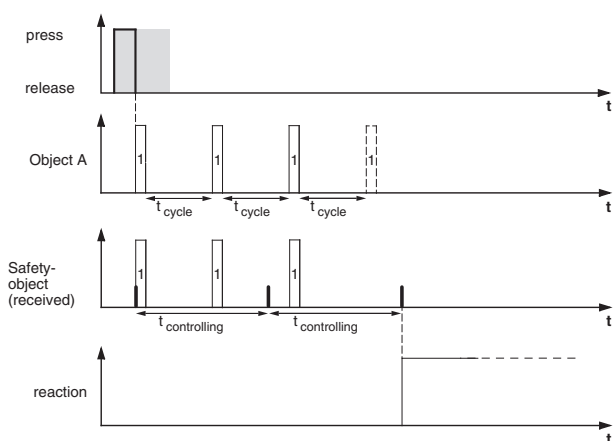

Example: Effect lighting

This example shows you how to program effect lighting, for example for a display window. A long push-button action switches between two different lighting scenes. A short push-button action stops the toggling and transmits a scene (to retrieve the scene, use the scene module for the actuator which has been activated) which switches off everything.

Number of objects = 2 (object A/B)


Object A/B = 1 byte infinite 0-255

Object A: Direct action when activated = none (stops cyclical transmission). Action when the long activation time has elapsed = transmits 1. Action when the long activation time is completed = none (stops cyclical transmission). Action on release after the long activation time is completed = none (stops cyclical transmission). Value 1 = 3.

Object B: Direct action when activated = none (stops cyclical transmission). Action on release before the

long activation time has elapsed = none (stops cyclical transmission). Action when the long activation time is completed = none (stops cyclical transmission). Action on release after the long activation time has been completed = toggles cyclically, transmits immediately, then cyclically. Value 1 = 1, value 2 = 2nd cycle time = e. g. 1 minute.

To do this, connect object A and object B with the extension unit object of the scene function.

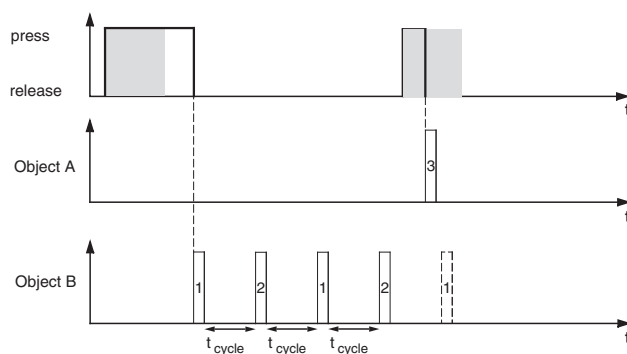

Communication objects

You can select the following communication objects:

Function	Object name	Type	Prio	Flags	Behaviour
Input X	Object A/B	1 bit	Low	WCT	Transmit/receive
Input X	Object A/B	2 bit	Low	WCT	Transmit/receive
Input X	Value object A/B	1 byte	Low	WCT	Transmit/receive

Multi-function.counter, LED 122A/1.0

Transmit 2 byte pulse edge commands via an object

You can also use these pulse edge functions to parameterise different object actions. However, in contrast to pulse edge functions, you can only transmit one object with 1 bit, 2 bits, 4 bits or 1 byte.

You can transmit normal or extended pulse edge commands. With normal pulse edge commands, you can specify which actions should be carried out when a key is pressed, and which should be carried out when a key is released. With extended pulse edge commands, you can also set the actions before and after the long activation time is completed.

You can transmit floating point numbers and whole numbers, without or without a sign.

Tab	Parameter
Input X	Functional selection
	Pulse edge function
	<i>only with extended pulse edge function:</i> Detection of a long activation time from 100 ms * Factor (4-250)
	Action when activated
	Action on release <i>only with extended pulse edge function:</i>
	Action on release before the long activation time has elapsed
	Action when the long activation time is completed
	Action on release after the long activation time has been completed


Explanation of actions: See 1-bit pulse edges.

Tab	Parameter
Input X - values	Object type value
	<i>Only with floating point:</i> value 1/2 Basic value, adjustable value range in brackets
	<i>only with whole number with sign:</i> value 1/2 (-32768 - 32767)
	<i>Only with floating point:</i> value 1/2 (0 - 65535)

Communication objects

You can select the following communication objects:

Function	Object name	Type	Prio	Flags	Behaviour
Input X	Value object A	2 byte	Low	WCT	Transmit/receive

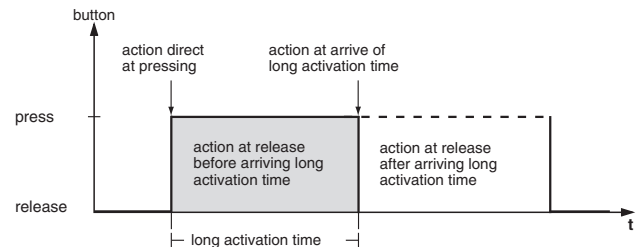

Setting the parameters for the 8-bit linear regulator

You can use the 8-bit linear regulator function to program a key (input) as a linear regulator. You can parameterise all four actions when pressing/releasing with a shorter or longer operating time in each case. You can establish the function with or without limit values (start/end value).

Tab	Parameter
Input X	Functional selection
	Detection of long activation time from 100 ms * Factor (4-250)
Input X (2)	Linear regulator function
	Direct action when operated
	Action on release before the long activation time has elapsed
	Action when the long activation time is completed
	Action on release after the long activation time has been completed
	<i>only with "start value and end value"</i> Start value
	Step value
	<i>only with "start value and end value"</i> end value
	Base for cyclic interval
	Factor for cyclic interval (3-255)

Multi-function.counter, LED 122A/1.0

A description of the actions is given below:

- Transmit the start value, then increase cyclically by the step value:
If no cycle time is running, the start value is transmitted immediately and a new cycle time is started. If a cycle time is already running, this is interrupted, the start value is transmitted and a new cycle time is started.
- Transmit the end value, then reduce cyclically by the step value:
If no cycle time is running, the end value is transmitted immediately and a new cycle time is started. If a cycle time is already running, this is interrupted, the end value is transmitted and a new cycle time is started.
- Increase the current object value cyclically:
Increase the current object value cyclically by the parameterised step interval.
- Increase the current object value once:
Increase the current object value once by the parameterised step interval. An active cycle time is terminated.
- Reduce the current object value cyclically:
Reduce the current object value cyclically by the parameterised step interval.
- Reduce the current object value once:
Reduce the current object value once by the parameterised step interval. An active cycle time is terminated.
- Reverse the slide direction and transmit cyclically:
If no cycle time is running, the slide is pushed in the opposite direction (of this push-button) and a new cycle time is started. If a cycle time is already running, it is interrupted, the slide is immediately pushed in the opposite direction (of this push-button) and a new cycle time is started.
- Move step-by-step to the limit values, and then back again:
The limit values are approached by one step interval at a time. When a limit is reached, the slide direction is reversed for the next action.
- none (stops cyclical transmission):
No action is carried out, and any active cycle time is stopped.
- no change:
No action is carried out, and any active cycle time is continued.




You can only maintain the limit values and the toggling to a new slide direction by operating on site!

Communication objects

You can select the following communication objects:

Function	Object name	Type	Prio	Flags	Behaviour
Input X	Value object A	1 byte	Low	WCT	Transmit/receive

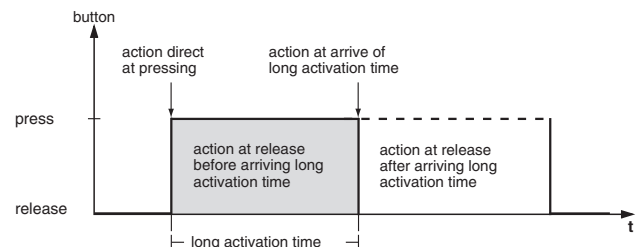

Retrieving scenes

The scene retrieval function does not access the internal scene module, but only accesses the bus externally via communication objects.

There are two types of scene function:

- normal
- extended

With the standard scene function, a scene is retrieved by a brief push-button action while a long push-button action is used to save a scene. You merely have to set the time after which a push-button action is identified as being long, together with the status LED control and the scene address.

Tab	Parameter
Input X	Functional selection
	Detection of long activation time from 100 ms * Factor (4-250)
	Scene function
	<i>Only with "extended"</i> Number of objects
	<i>Only with "normal scene function"</i> Scene address (0-63)

With the extended scene function, a wider range of functions are available. You can set actions for a shorter or longer activation time for both pressing and releasing the keys. You can also program a cycle time.

Depending on how many objects you have set in the scene function, you must make the settings in additional windows ("Input X - object A") or ("Input X - object B"):


Multi-function.counter, LED 122A/1.0

Tab	Parameter
Input X - (object A/B)	Direct action when activated
	Action on release before the long activation time has elapsed
	Action when the long activation time is completed
	Action on release after the long activation time has been completed
	Value 1 Scene address (0-63)
	Scene addresses are designed for the scene
	Value 2 Scene address (0-63)
	Scene addresses are designed for the scene
	Base for cyclic interval
	Factor for cyclic interval (3-255)

Communication objects

You can select the following communication objects:

Function	Object name	Type	Prio	Flags	Behaviour
Input X	Object A/B	1 byte	Low	WCT	Transmit/receive

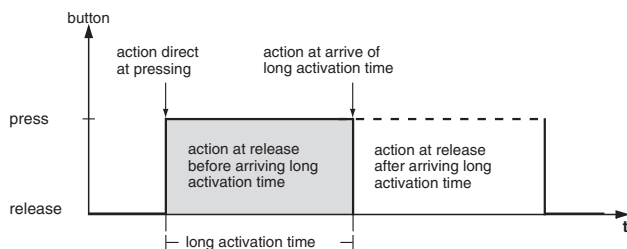

Activate impulse counter

You can use the impulse counter function to cyclically count the activation of the input within a parameterisable time frame and transmit this as a value (2-byte value object) via the bus. A count can be made up to 65535 (16 bits).

After the time frame has elapsed, the current counter reading is transmitted, the counter is reset and the counting process begins again.

The impulse counter can also be reset via another input which is programmed accordingly as a synchronous input.

The current counter reading can be read by setting the read flag.

i Ensure that the counter reading is not overwritten via the bus (write flag)!

You can determine whether the count should be made while the pulse edge is rising or falling, or while it is both rising and falling.

You can parameterise the cyclic interval using the cycle time base and a cycle time factor (cycle time = cycle time base x cycle time factor).

Tab	Parameter
Input X	Functional selection
	Count the impulses when
	Base for cyclic interval
	Factor for cyclic interval (3-255)

Communication objects

You can select the following communication objects:

Function	Object name	Type	Prio	Flags	Behaviour
Impulse counter	Value object A	2 byte	Low	RWC T	Transmit

Activating the switching counter

You can use the switching counter function to cyclically count the activation of the input and after a parameterisable counter reading, transmit this as a value (2-byte value object) via the bus. In addition, you can transmit a switching telegram when the counter reading is reached.

A count can be made up to 65535 (16 bits).

After the set counter reading is reached, the current counter reading is transmitted and the counter reading is reset to 0.

The current counter reading can be read off by setting the read flag.

i Ensure that the counter reading is not overwritten via the bus (write flag)!

Additionally, you have the option of transmitting the counter reading cyclically after an adjustable number of counting impulses.

You can determine whether the count should be made while the pulse edge is rising or falling, or while it is both rising and falling.

Tab	Parameter
Input X	Functional selection
	Count the impulses when
	Command when maximum counter reading is reached
	Maximum counter reading (1-65535)
	Gradual counter output (1-255)

Communication objects

You can select the following communication objects:

Function	Object name	Type	Prio	Flags	Behaviour
Switching counter	Value object A	2 byte	Low	WCT	Transmit
Switching counter	Switch object A	1 bit	Low	WCT	Transmit

Multi-function.counter, LED 122A/1.0

Resetting the counter

You can use the counter reset function to reset the impulse counter and the cycle time or the switching counter of another input. Additionally, you can use this function to transmit switching commands.

You can determine whether the count should be reset while the pulse edge is rising or falling, or while it is both rising and falling.

Additionally, you can program a switching telegram to be transmitted when the pulse edge is rising and/or falling.

Tab	Parameter
Input X	Functional selection
	Influences input (1-4)
	Behaviour on rising pulse edge
	Behaviour on falling pulse edge
	Counter and cyclic interval

Communication objects

You can select the following communication objects:

Function	Object name	Type	Prio	Flags	Behaviour
Reset counter	Switch object A	1 bit	Low	WCT	Transmit

Cyclical transmission for devices with cyclical monitoring

You can use the cyclical monitoring function to transmit telegrams cyclically. This is necessary when other devices are monitoring the presence of the push-button interface via their cyclical telegrams (protection against theft, fault monitoring). If no telegram is received from the push-button interface within a parameterisable time period, e. g. a signal is issued by this device. For this purpose, you can parameterise the push-button interface accordingly.

Tab	Parameter
Input X	Functional selection
	Operating mode
	Number of objects

Tab	Parameter
Input X (object A/B)	Object A/B
	Action when activated
	Action on release
	Value 1
	Value 2
	Base for cyclic interval
	Factor for cyclic interval (3-255)



When a disable function is activated via the disable object, all current push-button functions are reset or interrupted.

Communication objects

You can select the following communication objects:

Function	Object name	Type	Prio	Flags	Behaviour
Cyclical monitoring	Object A/B	1 bit/ 2 bit/ 4 bit/ 1 byte	Low	WCT	Transmit

Activating the disable function for the inputs

You can block the inputs in two different ways:

1. Separately for each input
2. All inputs function as a master input

You can determine whether a disable object = 0 or = 1 should be blocked.

Tab	Parameter
Input disable function	Disable function
	Blocking
	Behaviour at start of blocking
	Master input

Separately for each input

You can use this function to block each of the four or eight inputs individually. When an input is blocked, it fulfils no function. You can use an additional parameter to parameterise the behaviour of cyclical functions.

Tab	Parameter
Inputs X: Block	Input x
	Cyclical actions are

All keys function as a master input

You can use this action to specify one of the two or four inputs as the master input. When any key is pressed, the action which has been parameterised for the master key is carried out.

Tab	Parameter
Input X	Functional selection
	Type of blocking
	Master input

Multi-function.counter, LED 122A/1.0

Communication objects

You can select the following communication objects:

Function	Object name	Type	Prio	Flags	Behaviour
Disable function	Disable object	1 bit	Low	WC	Receive

i When a disable function is activated via the disable object, all current push-button functions are reset or interrupted.

Switching outputs

The outputs are switched depending on the value of the switching object.

According to the parameterisation, when a telegram is received, the output is

- switched on or off
- switched alternately (flashing) once every few seconds

You can attach a time delay to the switching on and off when a telegram is received.

i Disable functions and logic functions have a higher priority.
If a function of this type has been set for the output, the execution of the switching commands depends on the status of these functions.

Tab	Parameter
Output X	Output operation
Output X: Times	Time base for ON delay
	Factor for ON delay
	ON delay is
	Time base for OFF delay
	Factor for OFF delay
	OFF delay is

Communication objects

You can select the following communication objects:

Per key:

Function	Object name	Type	Prio	Flags	Behaviour
Output X	Switching object - output X	1 bit	Low	WC	Transmit/receive

Status information

Either active (transmission by changing the value to the bus) or passive (must be retrieved) objects are available as status information.

Tab	Parameter
Output X: General	Status information

Communication objects

You can select the following communication objects:

Function	Object name	Type	Prio	Flags	Behaviour
active status feedback object	Status feedback object	1 bit	Low	LCT	Transmit
Passive status feedback object	Status object	1 bit	Low	LC	Read

Setting the outputs for staircase timer status

The staircase timer function switches the output on when an ON telegram is received for a parameterisable time period. You can also set whether the ON period is extended by a new ON telegram (can be retrigged) and whether the period is ended by an OFF telegram.

The end of the ON period can be shown by a "flickering" of the output (switching on/off briefly several times). The time at which the pre-warning begins before the period expires and the number of interruptions can be set.

i In order to indicate a pre-warning, the staircase timer period must be at least 5 seconds longer than the pre-warning time.

You can attach a time delay to the switching on and off when a telegram is received (only switch off when "staircase time with manual off" has been set).

i In order for the LEDs on the outputs to also show the status of the actual lighting, you must match the parameter values of the outputs on the push-button interface to the parameter values of the corresponding actuator for the lighting.

i Disable functions and logic functions have a higher priority.
If a function of this type has been set for the output, the execution of the switching commands depends on the status of these functions.

Multi-function.counter, LED 122A/1.0

Tab	Parameter
Output X	Staircase timer function
Output X: Times	Time base for ON delay
	Factor for ON delay
	ON delay is
	Time base for OFF delay
	Factor for OFF delay
	OFF delay is
Output X: Staircase timer	Base for staircase timer
	Factor for staircase timer
	Staircase time is
	Staircase time
	Pre-warning at the end of the staircase time
	Number of pre-warnings
	Warning time

Communication objects

You can select the following communication objects:

Per input:


Function	Object name	Type	Prio	Flags	Behaviour
Input X	Switching object - output X	1 bit	Low	WC	Transmit/receive

Setting logic operations for the outputs


You can use the logic function to logically link the switching object with a logic object. You can choose between an OR, AND and an AND with reset function. You will find the current status of the output for the different types of logic operation in the following charts.

i The logic object has higher priority than the switching object. Its commands are always given priority. Delay times are not taken into account with the logic object.


– OR logic operation:

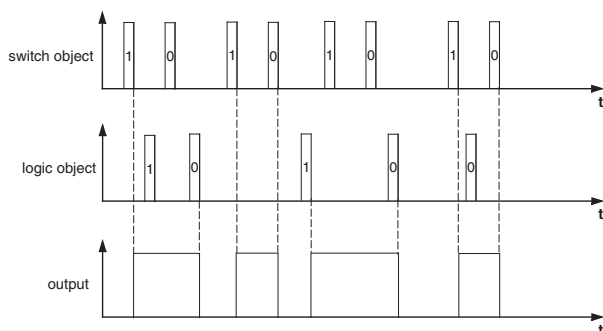

– AND logic operation:

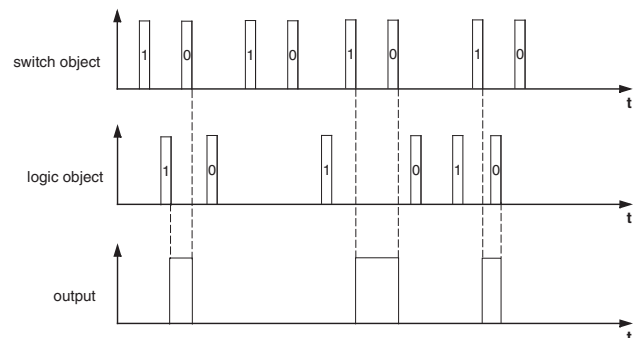

– AND with reset logic operation:

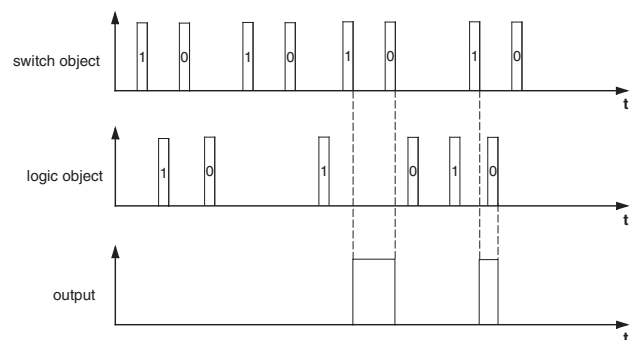

Multi-function.counter, LED 122A/1.0

Tab	Parameter
Output X: General	Priority function
Output X: Logic operation	Type of logic operation
	Value of logic object after bus voltage recovery

Communication objects

You can select the following communication objects:

Function	Object name	Type	Prio	Flags	Behaviour
Logic operation	Logic object - output X	1 bit	Low	WC	Receive

Activating the disable function for the outputs

You can also block the outputs and determine whether a disable object = "0" or = "1" should be blocked.

Tab	Parameter
Disable function for the outputs	Disable function
	Output X
Output X: Disable	Block
	Behaviour at start of blocking

Communication objects

You can select the following communication objects:

Function	Object name	Type	Prio	Flags	Behaviour
Disable function	Disable object outputs	1 bit	Low	WC	Receive



When a disable function is activated via the disable object, all current output functions (including cyclical actions) are reset or interrupted.

Behaviour when bus voltage is applied/restored or fails

Behaviour on application/recovery of the bus voltage

When a bus voltage is applied or recovered, telegrams can be sent depending on the setting.

Behaviour on failure of the bus voltage

Any status LEDs which were lit will be switched off.

Multi-function.counter, LED 122A/1.0

Parameters and settings

General	
Parameter	Setting
Push-button interface	2-gang 4-gang
Additional startup delay of the application 1s * factor	0 - 30, 0 default setting
Debounce time 10ms * factor	2 - 15, 2 default setting

Input X	
Parameter	Setting
Functional selection	Toggle
	Switching
	Dimming
	Blind control
	Pulse edges 1 bit, 2 bit (priority), 1-byte values
	Pulse edges with 2-byte values
	8-bit linear regulator
	Scene
	Impulse counter
	Switching counter
	Reset counter
Operating mode	Cyclical monitoring
	make contact
	break contact

When "Functional selection" has been set to "Toggle" in the "Input X" tab:

Input X	
Parameter	Setting
Functional selection	Toggle
Number of objects	one
	two
Object A/B	1 bit
	1 byte in steps 0 % - 100 %
	1 byte infinitely 0 - 255
Value	100 %
	adjustable in steps of ten as well as 25% and 75%
Value	0 - 255, 255 default setting

When "Functional selection" has been set to "Switching" in the "Input X" tab:

Input X	
Parameter	Setting
Functional selection	Switching
Number of objects	one
	two
Object A/B	1 bit
	1 byte in steps 0 % - 100 %
	1 byte infinitely 0 - 255
Value	ON telegram
	OFF telegram

Input X	
Parameter	Setting
Value	100 %
	adjustable in steps of ten as well as 25% and 75%
Value	0 - 255, 255 default setting

When "Functional selection" has been set to "Dimming" in the "Input X" tab:

Input X	
Parameter	Setting
Functional selection	Dimming
Detection of long activation time 100 ms * Factor (4-250)	4 - 250, 6 default setting
Dimming direction	brighter
	darker
Dimming steps (brighter)	brighter and darker
	to max. brightness
	1/2 brighter
	1/4 brighter
	1/8 brighter
	1/16 brighter
	1/32 brighter
1/64 brighter	
Dimming steps (darker)	to min. brightness
	1/2 darker
	1/4 darker
	1/8 darker
	1/16 darker
	1/32 darker
	1/64 darker
Cyclical transmission of the dimming steps	yes no
Base for cyclic interval	0.1 seconds
	1 second
	1 minute
	1 hour 1 day
Factor for cyclic interval (3-255)	3 - 255, 8 default setting
Stop telegram after release	enabled
	disabled

When "Functional selection" has been set to "Blind control" in the "Input X" tab:

Input X	
Parameter	Setting
Functional selection	Blind control
Detection of long activation time from 100 ms * Factor (4-250)	4 - 250, 6 default setting
Direction of movement	UP
	DOWN
	up and down
	with position values
Change in direction for slat adjustment from 100 ms * Factor (5-50)	5 - 50, 10 default setting
Selecting the positioning	one position (press briefly)
	two positions (differentiation between short/long operation)

Multi-function.counter, LED 122A/1.0

Input X	
Parameter	Setting
Position value 1 (short operation)	in steps of 0 %- 100 % infinitely 0-255
Value for blind position	<i>with "steps":</i> 0 % - 100 % in steps of 10, 100 % default setting <i>with "infinitely":</i> 0 - 255 in single steps, 255 default setting
Value for slat position	<i>with "steps":</i> 0 % - 100 % in steps of 10, 0 % default setting <i>with "infinitely":</i> 0 - 255 in single steps, 0 default setting
Position value 2 (long operation)	in steps of 0 %- 100 % infinitely 0-255

When "Functional selection" has been set to "Pulse edges 1 bit, 2 bit (priority), 1-byte values" in the "Input X" tab:

Input X	
Parameter	Setting
Functional selection	Pulse edges 1 bit, 2 bit (priority), 1-byte values
Pulse edge function	normal (pressed, released) extended (long and short operation)
Detection of long activation time from 100 ms * Factor (4-250)	4 - 250, 6 default setting
Number of objects	one two
Object A/B	1 bit 2 bit (priority control) 1 byte in steps 0 % - 100 % 1 byte infinitely 0 -255
Action when activated	<i>only with 1 bit:</i> transmits 1 <i>only with 1 bit:</i> transmits 0 <i>only with 2 bit/1 byte:</i> transmits value 1 <i>only with 2 bit/1 byte:</i> transmits value 2 toggles transmits its value none
Action on release	<i>only with 1 bit:</i> transmits 1 <i>only with 1 bit:</i> transmits 0 <i>only with 2 bit/1 byte:</i> transmits value 1 <i>only with 2 bit/1 byte:</i> transmits value 2 toggles transmits its value none
value 1 / value 2	switch on with priority control (11) switch off with priority control (10) switch off priority control (00)
value 1 / value 2	0 -100 % in 10% steps 100 % default setting value 1, 0 % default setting value 2

Input X	
Parameter	Setting
value 1 / value 2	0- 255, 255 default setting value 1, 0 default setting value 2

Input X - (object A/B)	
Parameter	Setting
Object A/B	1 bit 2 bit (priority control) 1 byte in steps 0 % - 100 % 1 byte infinitely 0 -255

Multi-function.counter, LED 122A/1.0

Input X - (object A/B)	
Parameter	Setting
Direct action when activated	<i>only with 1 bit:</i> transmits 1
Action on release before the long activation time has elapsed	<i>only with 1 bit:</i> transmits 1 immediately and then cyclically
	<i>only with 1 bit:</i> transmits 1 only cyclically
Action on completion of the long activation time	<i>only with 1 bit:</i> sets object value to 1 (readable only)
Action on release after completion of the long activation time	<i>only with 1 bit:</i> transmits 0
	<i>only with 1 bit:</i> transmits 0 immediately and then cyclically
	<i>only with 1 bit:</i> transmits 0 only cyclically
	<i>only with 1 bit:</i> sets object value to 0 (readable only)
	<i>only with 2 bit/1 byte:</i> transmits value 1
	<i>only with 2 bit/1 byte:</i> transmits value 1 immediately and then cyclically
	<i>only with 2 bit/1 byte:</i> transmits value 1 only cyclically
	<i>only with 2 bit/1 byte:</i> sets object value to value 1 (readable only)
	<i>only with 2 bit/1 byte:</i> transmits value 2
	<i>only with 2 bit/1 byte:</i> transmits value 2 immediately and then cyclically
	<i>only with 2 bit/1 byte:</i> transmits value 2 only cyclically
	<i>only with 2 bit/1 byte:</i> sets object value to value 2 (readable only)
	toggles
	toggles, transmits immediately, then cyclically
	toggles, only transmits cyclically
	toggles and is not transmitted
	toggles cyclically, transmits immediately, then cyclically
	toggles cyclically, only transmits cyclically
	toggles cyclically and is not transmitted
	<i>only with 1 bit:</i> transmits its value
<i>only with 1 bit:</i> transmits its value immediately and then cyclically	
<i>only with 1 bit:</i> transmits 1 immediately and after a cycle time of 0	
<i>only with 2 bit/1 byte:</i> transmits value 1 and after a cycle time value 2	
<i>only with 1 byte:</i> increase the current object value by value 1 cyclically	
<i>only with 1 byte:</i> reduce the current object value by value 2 cyclically	
none (stops cyclical transmission)	
no change	
none (stop after current cycle time has elapsed)	

Input X - (object A/B)	
Parameter	Setting
value 1 / value 2	switch on with priority control (11)
	switch off with priority control (10)
	switch off priority control (00)
value 1 / value 2	0 -100 % in 10% steps 100 % default setting value 1, 0 % default setting value 2
value 1 / value 2	0- 255, 255 default setting value 1, 0 default setting value 2
	0.1 seconds
	1 second
	1 minute
Base for cyclic interval	1 hour
	1 day
Factor for cyclic interval (3-255)	3-255, 10 default setting

When "Functional selection" has been set to "Pulse edges with 2-byte values" in the "Input X" tab:

Input X	
Parameter	Setting
Functional selection	Pulse edges with 2-byte values
Pulse edge function	normal (pressed, released)
	extended (long and short activation)
Detection of long activation time from 100 ms * Factor (4-250)	4 - 250, 6 default setting
Action when activated	transmits value 1
	<i>only with extended pulse edge function:</i> transmits value 1 immediately and then cyclically
	<i>only with extended pulse edge function:</i> transmits value 1 only cyclically
	<i>only with extended pulse edge function:</i> sets object value to value 1 (readable only)
	transmits value 2
	<i>only with extended pulse edge function:</i> transmits value 2 immediately and then cyclically
	<i>only with extended pulse edge function:</i> transmits value 2 only cyclically
	<i>only with extended pulse edge function:</i> sets object value to value 2 (readable only)
	transmits its value
	<i>only with extended pulse edge function:</i> transmits value 1 and after a cyclic interval value 2
	<i>only with extended pulse edge function:</i> none (stops cyclical transmission)
	none

Multi-function.counter, LED 122A/1.0

Input X	
Parameter	Setting
Action on release Action on release before the long activation time has elapsed Action when the long activation time is completed Action on release after the long activation time has been completed	transmits value 1
	<i>only with extended pulse edge function:</i> transmits value 1 immediately and then cyclically
	<i>only with extended pulse edge function:</i> transmits value 1 only cyclically
	<i>only with extended pulse edge function:</i> sets object value to value 1 (readable only)
	transmits value 2
	<i>only with extended pulse edge function:</i> transmits value 2 immediately and then cyclically
	<i>only with extended pulse edge function:</i> transmits value 2 only cyclically
	<i>only with extended pulse edge function:</i> sets object value to value 2 (readable only)
	transmits its value
	<i>only with extended pulse edge function:</i> transmits value 1 and after a cyclic interval value 2
	<i>only with extended pulse edge function:</i> none (stops cyclical transmission)
	none

Input X - values	
Parameter	Setting
Object type value	Floating point
	Whole number with sign (-32768 ... 32767)
	Whole number without sign (0 ... 65535)
Value 1/2 Basic value, adjustable value range in brackets	different values between 0.01 and 327.68 in different step intervals 0.01 (0 to 20.47) default setting
value 1/2 (-32768 - 32767)	-32768 - 32767
value 1/2 (0 - 65535)	0 - 65535

When "Functional selection" has been set to "8-bit linear regulator" in the "Input X" tab:

Input X (2)		
Parameter	Setting	
Linear regulator function	with start value and end value without start value and end value	
Direct action when activated Action on release before the long activation time has elapsed Action on when the long activation time is completed Action on release after the long activation time has been completed	<i>only with "start value and end value"</i> Transmit the start value, then increase cyclically by the step interval	
	<i>only with "start value and end value"</i> Transmit the end value, then reduce cyclically by the step interval	
	Increase the current object value cyclically	
	Increase the current object value once	
	Reduce the current object value cyclically	
	Reduce the current object value once	
	Reverse the slide direction and transmit cyclically	
	Move step-by-step to the limit values and then back again	
	none (stops cyclical transmission)	
	no change	
	Start value	0 - 255 in single steps
	Step value	0 - 255 in single steps
	End value	0 - 255 in single steps
Base for cyclic interval	0.1 seconds	
	1 second	
	1 minute	
	1 hour	
	1 day	
Factor for cyclic interval (3-255)	3 - 255 in single steps, 5 default setting	

When "Functional selection" has been set to "Scene" in the "Input X" tab:

Input X	
Parameter	Setting
Functional selection	Scene
Detection of long activation time from 100 ms * Factor (4-250)	4 - 250 in single steps, 30 default setting
Scene function	normal (short = send / long = save)
	extended
Number of objects	one
	two
Scene address (0-63)	0 - 63 in single steps

Multi-function.counter, LED 122A/1.0

Input X - (object A/B)	
Parameter	Setting
Action when activated	transmits value 1
	transmits value 2
	toggles
	toggles cyclically, transmits immediately, then cyclically
	transmits value 1 and after a cyclic interval value 2
	none (stops cyclical transmission)
	no change
Action on release before the long activation time has elapsed	transmits value 1
	transmits value 2
	toggles
	toggles cyclically, transmits immediately, then cyclically
	transmits value 1 and after a cyclic interval value 2
	none (stops cyclical transmission)
	no change
Action on when the long activation time is completed	transmits value 1
	transmits value 2
	toggles
	toggles cyclically, transmits immediately, then cyclically
	transmits value 1 and after a cyclic interval value 2
	none (stops cyclical transmission)
	no change
Action on release after the long activation time has been completed	transmits value 1
	transmits value 2
	toggles
	toggles cyclically, transmits immediately, then cyclically
	transmits value 1 and after a cyclic interval value 2
	none (stops cyclical transmission)
	no change
Scene address 1 (0-63) Scene address 2 (0-63)	0 - 63 in single steps
Scene address 1 is designed to Scene address 2 is designed to	retrieve the scene (set by default to value 1) store scene (set by default to value 2)
Base for cyclic interval	0.1 seconds
	1 second
	1 minute
	1 hour
Factor for cyclic interval (3-255)	3 - 255 in single steps, 10 default setting

When "Functional selection" has been set to "Impulse counter" in the "Input X" tab:

Input X	
Parameter	Setting
Functional selection	Impulse counter

Input X	
Parameter	Setting
Count the impulses when	rising edge
	falling edge
	rising and falling edge
Base for cyclic interval	0.1 seconds
	1 second
	1 minute
	1 hour
Factor for cyclic interval (3-255)	3 - 255 in single steps, 10 default setting

When "Functional selection" has been set to "Switching counter" in the "Input X" tab:

Input X	
Parameter	Setting
Functional selection	Switching counter
Count the impulses when	rising edge
	falling edge
	rising and falling edge
Command when maximum counter reading reached	sends no telegram
	sends ON telegram
	sends OFF telegram
	toggles
Maximum counter reading (1-65535)	1 - 65535 in single steps, 65535 default setting
Gradual counter output (1-255)	1 - 255 in single steps, 10 default setting

When "Functional selection" has been set to "Reset counter" in the "Input X" tab:

Input X	
Parameter	Setting
Functional selection	Reset counter
Affects input (1-4)	1 - 4
Behaviour on rising pulse edge	no action
	sends ON telegram
	sends OFF telegram
Behaviour on falling pulse edge	no action
	sends ON telegram
	sends OFF telegram
Counter and cycle time	do not reset
	reset on rising pulse edge
	reset on falling pulse edge
	reset on rising and falling pulse edge

Input X	
Parameter	Setting
Functional selection	Cyclical monitoring
Operating mode	make contact
	break contact
Number of objects	one
	two

Multi-function.counter, LED 122A/1.0

Input X - (object A/B)	
Parameter	Setting
Object A/B	1 bit
	2 bit (priority control)
	4 bit
	1 byte in steps 0% - 100%
	1 byte infinitely 0 - 255
Action when activated	transmits value 1 immediately and then cyclically sends value 2 immediately and then cyclically
Action on release	transmits value 1 immediately and then cyclically sends value 2 immediately and then cyclically
value 1 / value 2	0 -100 % in 10% steps 100 % default setting value 1, 0 % default setting value 2
value 1 / value 2	0- 255, 255 default setting value 1, 0 default setting value 2
Base for cyclic interval	0.1 seconds
	1 second
	1 minute
	1 hour
Factor for cyclic interval (3-255)	3 - 255 in single steps, 5 default setting

Input disable function	
Parameter	Setting
Disable function	disabled
	enabled
Block	For object value "0"
	For object value "1"
Behaviour at start of blocking	separately for each input all inputs function as a master input
Master input	Input 1... 4

Inputs 1-X: Disable	
Parameter	Setting
Input X	lock
	do not disable
Cyclical actions are	interrupted
	interrupted and resumed after the blocking
	continued

Output X General	
Parameter	Setting
Status information	active status feedback object
	passive status feedback object
Priority function	none Logic operation
Output operation	make contact
	break contact
	flash for ON flash for OFF
Staircase timer function	switched off switched on
ON delay	switched off switched on
OFF delay	switched off switched on
Status on bus voltage recovery	switched off switched on

Output X Times	
Parameter	Setting
Time base for ON delay	0.1 seconds
	1 second
	1 minute
	1 hour
	1 day
Factor for ON delay (1-255)	1 - 255 in single steps, 3 default setting
ON delay is	not retriggerable
	retriggerable
Time base for OFF delay	0.1 seconds
	1 second
	1 minute
	1 hour
	1 day
Factor for OFF delay (1-255)	1 - 255 in single steps, 3 default setting
OFF delay is	not retriggerable retriggerable

When the "Priority function" is set to "Logic operation" in the "Output X" tab:

Output X Logic operation	
Parameter	Setting
Type of logic operation	OR
	AND AND (switching object follows the output)
Type of logic operation	OR
	AND AND (switching object follows the output)
Value of logic object after bus voltage recovery	1 0

Multi-function.counter, LED 122A/1.0

When the "Priority function" is set to "Staircase lighting function" in the "Output X" tab:

Output X Staircase timer	
Parameter	Setting
Base for staircase timer	0.1 seconds
	1 second
	1 minute
	1 hour
	1 day
Factor for staircase timer (1-255)	1 - 255 in single steps, 3 default setting
Staircase time is	not retriggerable retriggerable
Staircase timer	without manual OFF with manual OFF
Number of pre-warnings	1
	2
	3
Warning time (1-255), factor x 1 s	1 - 255 in single steps, 30 default setting

Disable function for the outputs	
Parameter	Setting
Disable function	disabled
	enabled
Output X	lock
	do not disable

When the "Disable function" has been set to "released" in the tab "Disable functions of the outputs" and "Output X" has been set to "disable" in the tab "Disable functions of the outputs":

Output X: Disable	
Parameter	Setting
Block	For object value "0"
	For object value "1"
Behaviour at start of blocking	no action
	operated
	not operated
	flash