## O2010GB2

Dimensions

#### **Safety Information**

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

### **Esmi Impresia Heat Detector**

Esmi Impresia Heat Detector (FFS06741002) is an addressable heat detector with built-in isolator module, designed for installing in addressable fire alarm systems with Esmi ELC loop controller supporting Schneider Electric communication protocol. The detector sensitivity can be configured with software. The detector is compatible with Esmi Impresia Standard Base (FFS06741018). The address setting is done by the panel, QR code or handheld addressing device. The address range is 1-250.

For more technical information visit www.se.com.

## 🛕 WARNING

#### HAZARD OF COMPROMISED DETECTION FUNCTIONALITY.

- Dust covers help to protect units during shipping and when first installed.
- Sensors should be removed before construction, major re-decoration or other dust producing work is started.
- Failure to follow these instructions can result in death or serious injury.

#### Installation

Note: Collect the QR code stickers from the devices if QR codes are used for addressing of the devices. 1. Follow the applicable local and national installation codes and regulations.

- IMPORTANT: Do not install the detector near sources of steam, smoke, condensation or heat.
   If needed, lock the detector to the base by removing a small tab on the detector as shown on the
- picture 1.
   Install the detector base into a flat surface by using appropriate screws.
- The loop power must be disconnected during installation.
- 5. Connect the loop wiring as shown on picture 3.
- Insert the detector to the base by turning it clockwise on the base until it drops into place. A stripe on the detector side match to the short stipe of the base. Continue to turn the detector until the stripe on the detector meet the longer stipe on the base - a click is heard. See picture 4.
- 7. Test the detector functionality with Solo no climb tester.
- If the detector is locked into the base it can be removed by pressing the lid with a small flat head screwdriver
- and gently turning the detector counter clockwise at the same time. (Picture 6)

#### Testing

Before testing make sure all persons in the building are aware of the test! If needed disconnect fire alarm devicess, alarm transmitters and other fire outputs before the test. Use Solo "No Climb" tester to test the detector after installation. Follow the testers manufacturer instruction how to run smoke and heat test.

### **Technical Specifications**

 Operating Voltage Range
 16 - 32VDC (Nom. 27VDC)

 Consumption in quiescent state, no communication
 170 $\mu$ A@27VDC

 Consumption in quiescent state, with communication
 290 $\mu$ A@27VDC

 Consumption in alarm state, with communication
 6.5mA

 Class, selectable from the control panel
 A1/R (rate of rise +58°C), A2/S (static +60°C), B/S (static +75°C)

 (*in accordance with EN54-5*)
 Output in alarm state at terminal RI (terminals 4/1).

 Output in gauge for terminals
 0.4mm<sup>2</sup> + 2.0mm<sup>2</sup>

 Relative humidity resistance.
 (93 ± 3)% @ 40°C

 Supported communication protocol
 Esmi ELC



EN 54-5:2017+A1:2018 EN 54-17:2005/AC:2007 Detector Class: A1/R (rate of rise +58°C), A2/S (static +60°C), B/S (static +75°C)



18021124. RevB. 09/2022

Published oktober 19, 2022

Essential Characteristics According to EN 54

Performance under fire conditions


Operational reliability

Humidity resistance

Temperature resistance

Shock and vibration resistance

Durability:

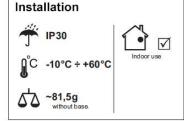

mu

03

Performance

Pass

Pass


Pass


Pass Pass


# O2010GB2

# Esmi Impresia Heat Detector

Esmi Fire

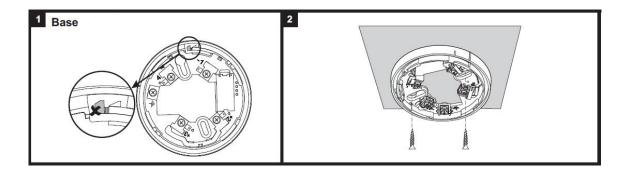

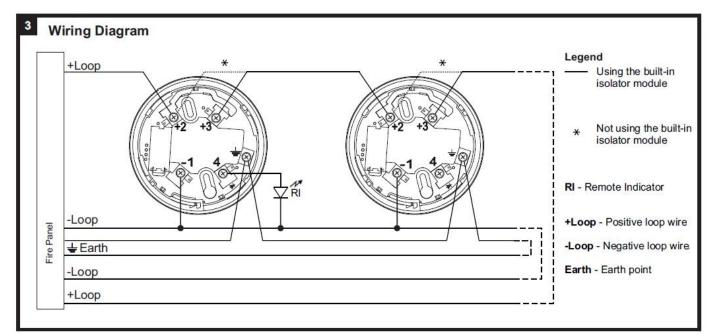

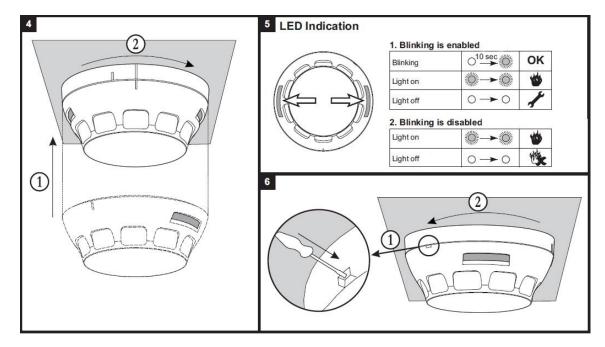

Published oktober 19, 2022



© 2022 Schneider Electric Fire & Security Oy. All rights reserved.